

GAS RANGES

CONTENTS

A	GENERAL INFORMATION.....	Page 2
A1	PRODUCT DESCRIPTION	Page 3
A2	TECHNICAL INFORMATION	Page 4
A3	TRANSPORTATION	Page 4
A4	UNPACKING	Page 4
B	INSTALLATION	Page 5
C	SAFETY INSTRUCTIONS	Page 6
D	OPERATION	Page 7
E	CLEANING & MAINTENANCE	Page 8
F	TROUBLESHOOTING	Page 9
G	INJECTOR CHANGE AND GAS SETTING	Page 10
H	GAS CONNECTION IMAGES.....	Page 12
I	SPARE PART LIST- EXPLODING DRAWING.....	Page 14

A GENERAL INFORMATION

Before installing the appliance, read operation and maintenance instructions carefully. Wrong installation and part changing may damage the product or may cause injury on people. These are not in our company's responsibility to damage the appliance intentionally, negligence, detriments because of disobeying instructions and regulations, wrong connections. Unauthorized intervention to appliance invalidates the warranty.

1. This instruction manual should be kept in a safe place for future reference.
2. **Installation should be made in accordance with ordinances and security rules of that country by a qualified service personnel.**
3. This appliance has to be used by trained person.
4. Please turn off the appliance immediately in the event of malfunction or failure. The appliance should be repaired only by authorized service personnel. Please demand original spare part.

GAS RANGES

A1 PRODUCT DESCRIPTION

*The Professional plus Gas Ranges, that provides high efficiency has been designed to be used in industrial kitchens.

Product Code	Model	Dimensions (mm)	Weight (kg)	Packaging Dimensions (mm)
EMP.6KG010	2 Burner Ranges	400x650x290	22	480x760x600
EMP.6KG020	4 Burner Ranges	600x650x290	32	700x760x600
EMP.6KG010-O	1 Burner Ranges	400x635x285	25	480x760x600
EMP.6KG020-O	2 Burner Ranges	800x635x285	47	900x850x60
EMP.PLS.7KG010	2 Burner Ranges	400x730x300	34	480x800x620
EMP.PLS.7KG020	4 Burner Ranges	800x730x300	69	900x850x620
EMP.PLS.7KG030	6 Burner Ranges	1200x730x300	101	1280x860x620
EMP.PLS.9KG010	2 Burner Ranges	400x900x300	44	480x1000x620
EMP.PLS.9KG020	4 Burner Ranges	800x900x300	82	900x1000x620
EMP.PLS.9KG030	6 Burner Ranges	1200x900x300	127	1280x1000x620
EMP.PLS.9KG020-O	Cast Cooker	800x900x285	94	900x1000x620
EMP.PLS.9YRG80	4 Burner Ranges	800x900x300	76	900x1000x620

A2 TECHNICAL INFORMATION

Product Code	Power NG (KW)	Gas Consumption m³/h (NG)	Power	Gas Consumption kg/h (LPG)
			LPG (KW)	
EMP.6KG010	7,10	0,75	7,1	0,55
EMP.6KG020	14,20	1,50	14,2	1,1
EMP.6KG010-O	8,65	0,91	8,65	0,68
EMP.6KG020-O	17,30	1,83	15,2	1,19
EMP.PLS.7KG010	14,30	1,51	15,18	1,19
EMP.PLS.7KG020	28,66	3,03	30,36	2,38
EMP.PLS.7KG030	42,99	4,55	45,54	3,57
EMP.PLS.9KG010	17,48	1,85	17,51	1,37
EMP.PLS.9KG020	34,97	3,70	35,01	2,75
EMP.PLS.9KG030	52,45	5,55	52,52	4,12
EMP.PLS.9YRG80	31,25	3,30	28,72	2,25
EMP.PLS.9KG020-O	11,20	1,18	8,7	0,65

A3 TRANSPORTATION

*This appliance can not be moved by hand from area to area. It must be moved on pallet with forklift truck.

A4 UNPACKING

*Please unpack the package according to the security codes and ordinances of current country and get rid from the pack. Parts which contacts with food are produced by stainless steel. All plastic parts are marked by material's symbol.

*Please check that all the parts of appliance had come completely and if they are damaged or not during the shipping.

GAS RANGES

B INSTALLATION

*Please place the product to straight and sturdy ground, please take necessary steps against possibility of overturn.

*Technician who will serve for installation and service for the appliance must be professional on this subject and must have installation and service licenses by the company.

*Connection to Gas Fitment must be done by authorized person.

*The area where the appliance is must have enough ventilation and vent-hole.

*The appliance must be connected correctly according to local and national gas standards of your country.

*The appliance gas entrances are indicated with "G" label on the body.

*Connection to gas fitment must be done with suitable diameter metal flex pipe and spheric valve. The spheric valve must be immobilized to a place that is far away from heat and accessible during the danger. After gas entrance connection done, gas leakages must be checked.

*According to the datas on appliance information plate, gas and pressure must be adjusted. If the gas type that is adjusted is not the suitable with gas type that is at installation place, apply the instructions that is about adjustment of different gas type. **(Event :G)**

*If the location where gas ranges placed is covered with nonflammable heat insulation material, the distance between them must be 5 cm. Otherwise it should be at least 20 cm. The appliance shouldn't be operated under chimney hood.

C SAFETY INSTRUCTIONS


-  *Do not use the appliance in insufficient lighted place.
-  *Do not touch the moving attachments while the appliance operates.
-  *Do not install the appliance in the presence of flammable or explosive materials.
-  *Do not operate the appliance when the machine is empty.
-  *Do not load so less or more than appliance's capacity .
-  *Do not attempt to use the appliance without suitable protective equipments.
-  *Because of any reason if there is a fire or flame flare where the appliance is used, turn off all gas valves and electric contactor switch quickly and use fire extinguisher .Never use water to extinguish the fire.
-  *If there is gas leakage where the appliance is, .do not fire absolutely and do not use electric .
-  *Definitely do not allow to check the sealing with flame.

GAS RANGES

D OPERATION

*Control Panel;

- A : OFF Position
- B : Lighter Position
- C : Full Flame
- D : Half Flame

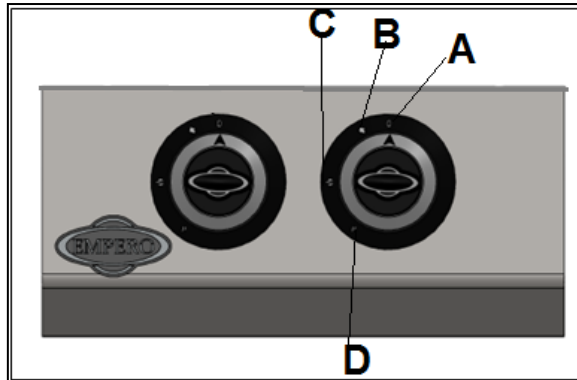

*Operating;

- ³⁵₁₇ According to type of use, make gas entrance connection from behind the appliance. Because the machine is operated with LPG and NG.
- ³⁵₁₇ Turn on the gas valves.
- ³⁵₁₇ Press the gas grill button and provide pilot position. Fire the pilot with suitable lighter.
- ³⁵₁₇ In order to heat thermocouple's end keep pressing to button after the pilot is fired.
- ³⁵₁₇ For desired temperature switch to half or full flame position.
- ³⁵₁₇ Press the button at Pilot position before firing to remove the air from gas fitment during first operation.
- ³⁵₁₇ The burner has features of primary and secondary burning and high burning efficiency. It is also environmentalist and has world standards with low CO₂ and CO waste gas emission.

E CLEANING & MAINTENANCE

☐ **CLEANING AND MAINTENANCE AFTER EVERY USE**

- ³⁵₁₇ Turn off the gas connection before cleaning.
- ³⁵₁₇ Clean the outer surface of the appliance with a wet cloth and chrome shiner.
- ³⁵₁₇ Do not use abrasive cleaning chemicals as these can leave harmful residues.
- ³⁵₁₇ Do not wash the appliance with pressure water.
- ³⁵₁₇ Do not clean the appliance with materials that may damage chrome material.
- ³⁵₁₇ Wash the grills with hot water and then dry after every use.

☐ **PERIODIC CLEANING AND MAINTENANCE**

- ³⁵₁₇ Maintenance should be done by qualified person.
- ³⁵₁₇ These parts ; Gas storage, pilot, thermocouples, taps, burner, lighter and spark plug. cable are not maintained so they need to be changed when they have error.
- ³⁵₁₇ Check the gas connection hoses in periodic time. If there is slit, hole..etc, change the hoses.
- ³⁵₁₇ Ventilate the area where the device is in periodic times.

GAS RANGES

F TROUBLESHOOTING

THE APPLIANCE DOESN'T OPERATE	1. Check if the gas connection is done or not. 2. If there is no gas entrance to pilot,the appliance is not operated. 3. If the hoses that have gas entrance lose gas due to slit,hole.etc.,the appliance is not operated.
--------------------------------------	--

MEATS ARE NOT COOKED WELL	1. Check if it is operated at suitable gas setting or not.
----------------------------------	--

THE APPLIANCE STOPPED	1. Gas flow is stopped automatically when the flame is off due to having gas tap that has safety valve.In this situation the appliance is not operated. 2. When there is gas leakage,if there is solenoid gas stopper alarm,gas flow is stopped and the appliance is not operated.Ventilate the area through the agency of vent-hole.
------------------------------	--

³⁵₁₇ If cooking at gas ranges is not done at suitable quality

³⁵₁₇ If any function of security doesn't work

☐ Do not use the appliance.

***If these problems are still going on,contact with our authorized services.**

G INJECTOR CHANGE AND GAS SETTING

GAS RANGE BURNER-INJECTOR CHANGE CHART

NG / LPG		G20	G25	G30	G31
				30/50 mbar	30/50 mbar
EMP.6KG010	Ø mm	Ø 1,40	Ø 1,40	Ø 0,97	Ø 0,97
	X	2x	2x	2x	2x
EMP.6KG020	Ø mm	Ø 1,40	Ø 1,40	Ø 0,97	Ø 0,97
	X	4x	4x	4x	4x
EMP.6KG010-O	Ø mm	Ø 2,20	Ø 2,20	Ø 1,40	Ø 1,40
	X	1x	1x	1x	1x
EMP.6KG020-O	Ø mm	Ø 2,20	Ø 2,20	Ø 1,40	Ø 1,40
	X	2x	2x	2x	2x
EMP.PLS.9YRG80	Ø mm	3,00 - 2,00 1,80 - 1,10	3,00 - 2,00 1,80 - 1,10	3,00 - 2,00 1,80 - 1,10	3,00 - 2,00 1,80 - 1,10
	X	4x	4x	4x	4x
EMP.PLS.9KG020-O	Ø mm	Ø 2,50	Ø 2,50	Ø 1,50	Ø 1,50
	X	1x	1x	1x	1x
EMP.PLS.7KG010	Ø mm	Ø 2,00	Ø 2,00	Ø 1,40	Ø 1,40
	X	2x	2x	2x	2x
EMP.PLS.7KG020	Ø mm	Ø 2,00	Ø 2,00	Ø 1,40	Ø 1,40
	X	4x	4x	4x	4x
EMP.PLS.7KG030	Ø mm	Ø 2,00	Ø 2,00	Ø 1,40	Ø 1,40
	X	6x	6x	6x	6x
EMP.PLS.9KG010	Ø mm	Ø 2,4-2,0	Ø 2,4-2,0	Ø 1,6-1,4	Ø 1,6-1,4
	X	2x	2x	2x	2x
EMP.PLS.9KG020	Ø mm	Ø 2,4-2,0	Ø 2,4-2,0	Ø 1,6-1,4	Ø 1,6-1,4
	X	4x	4x	4x	4x
EMP.PLS.9KG030	Ø mm	Ø 2,4-2,0	Ø 2,4-2,0	Ø 1,6-1,4	Ø 1,6-1,4
	X	6x	6x	6x	6x

GAS RANGES

Change of Burner Injector;

1. Take off the grill and upper lid of burner (Image 1)
2. Change B injector by paying attention to the datas at chart with suitable injector.
3. Adjust the burner entrance setting by loosening 'C' bolt (Image 2)
4. Change B injector by paying attention to the datas at chart with suitable injector. For this it is enough to take off 'D' fitting and pull the gas pipe to down.

Setting of Half Flame;

1. Remove the tap button and set by turning tap half flame screw (A) with suitable screwdriver. (Image 4) Turn it to left for transformation from LPG to N.G, turn it right for transformation from N.G to LPG.
2. After this process, operate the appliance and set it not to be deflated during transition from full flame to half flame

H GAS CONNECTION IMAGES

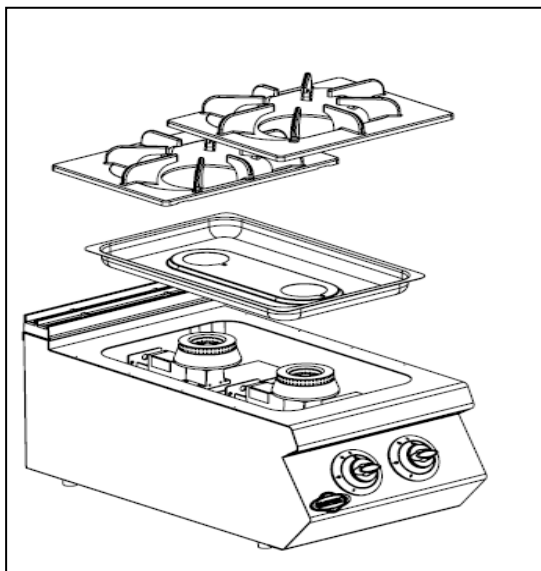


Image 1

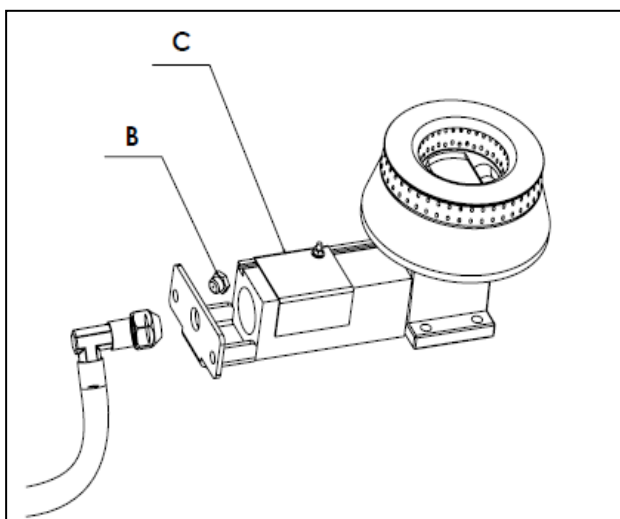


Image 2

GAS RANGES

H GAS CONNECTION IMAGES

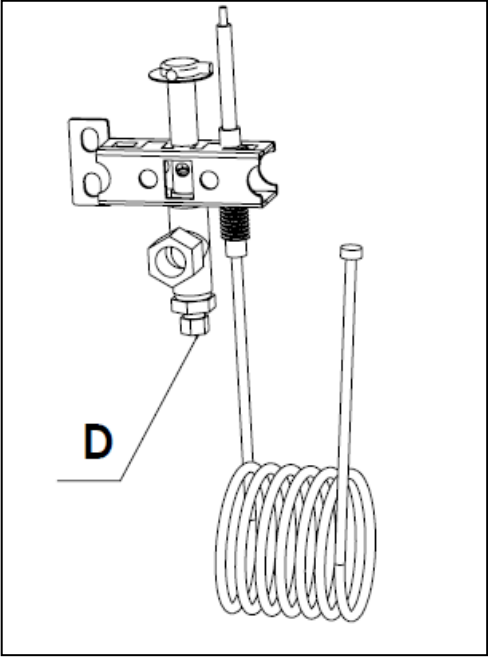


Image 3


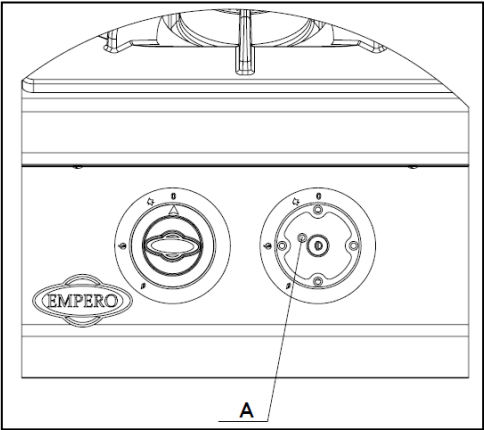


Image 4

I SPARE PART LIST-EXPLODING DRAWING

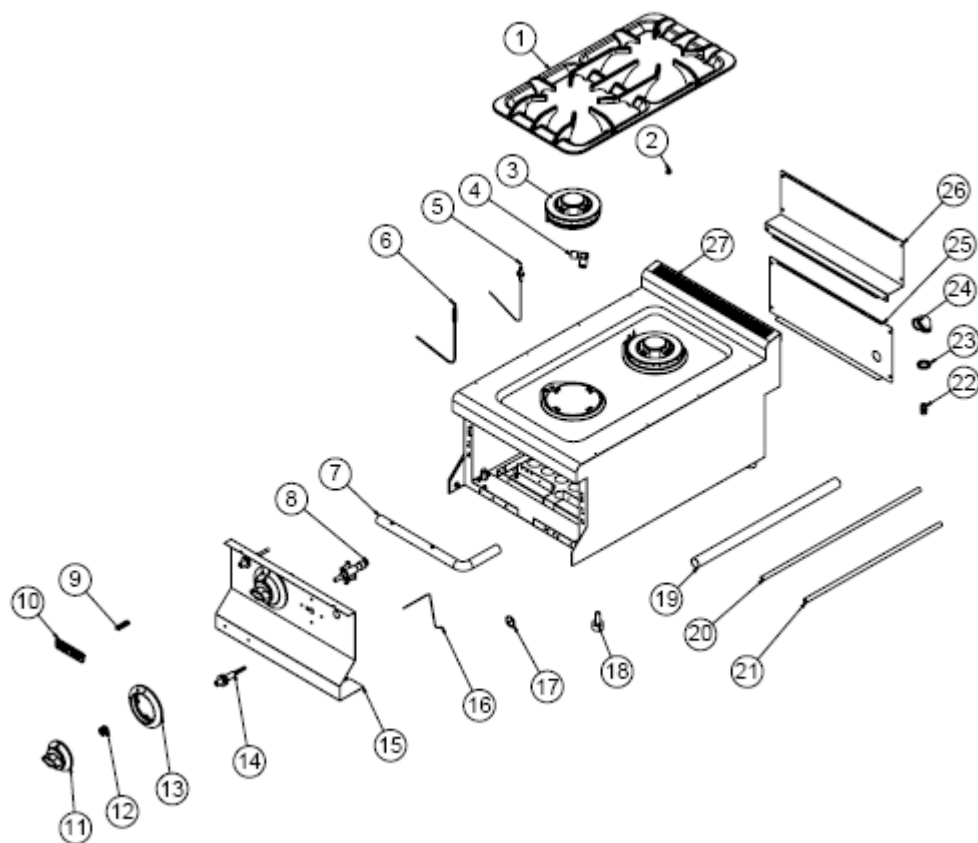


EMP.6KG010

GAS RANGES

I SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE : EMP.6KG010		
NO	PRODUCT NAME	P.CODE
1	53*28 CM CASTING FURNACE	M.AKS-DKM-KZN-001
2	INJECTOR M6*0.75 Ø1.40 MM	M.GAZ-ENJ-LPG-002
3	BURNER WITH LPG	M.GAZ-BRL-BEK-003
4	UNION BODY	M.GAZ-TES-SRI-022
5	IGNITION PLUG	M.GAZ-CKM-BUJI-004
6	M8*1000 NO:20 THERMO ELEMENT	M.GAZ-TRL-004
7	GAS TANK	M.GAZ-DPO-SNC-006
8	GAS VALVE 19.28 1/4 G M8*1	M.GAZ-VNA-ECA-001
9	M4 FRAME SPRING	M.YAY-PG-004
10	TICKET	JP.M.AKS-OZL-MTL-001
11	BUTTON	M.AKS-DGM-EMP-024
12	BUTTON SOCKET 8 MM	M.AKS-DGM-SKT-001
13	BUTTON BUFFER	M.AKS-DGM-EMP-026
14	PIOZE LIGHTER Ø:18	M.GAZ-CKM-PIEZ-001
15	FRONT PANEL	YSC-KNX.SNC-LZ-0163
16	CABLE 500MM	M.GAZ-CKM-KBL-004
17	GASKET	M.CNT-PLS-KLN-002
18	M10*35 FOOT	JP.M.AKS-AYK-PLS-002
19	1/2-1/2 40 CM GAS FLEX	M.GAZ-TES-SPR-003
20	GAS FLEX 25CMØ10 MM 8 MM	M.GAZ-TES-SPR-041
21	GAS FLEX 70CM Ø10 MM 8 MM	M.GAZ-TES-SPR-040
22	CONNECTION 1/2	JP.M.MEK-TES-SRI-014
23	AK16 L:4 CONTRACTING NUT	M.GAZ-TES-SRI-007
24	BRACKET	JP.M.GAZ-TES-GLV-002
25	REAR BOTTOM SHEET	YSC-KNX.SNC-PN-0106
26	REAR TOP SHEET	YSC-KNX.SNC-PN-0105
27	CHASSIS	-

I SPARE PART LIST-EXPLODING DRAWING

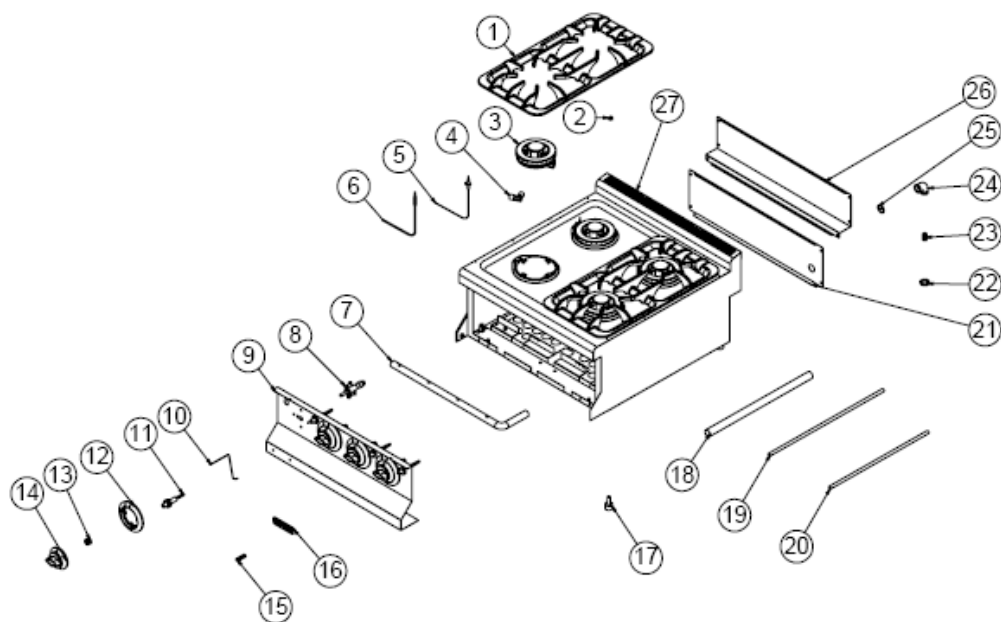


EMP.6KG020

GAS RANGES

I SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE: EMP.6KG020		
NO	PRODUCT NAME	P.CODE
1	53*28 CM CASTING FURNACE	M.AKS-DKM-KZN-001
2	INJECTOR M6*0.75 Ø1.40 MM	M.GAZ-ENJ-LPG-002
3	BURNER WITH LPG	M.GAZ-BRL-BEK-003
4	UNION BODY	M.GAZ-TES-SRI-022
5	IGNITION PLUG	M.GAZ-CKM-BUJI-004
6	M8*1000 NO:20 THERMO ELEMENT	M.GAZ-TRL-004
7	GAS TANK	M.GAZ-DPO-SNC-007
8	GAS VALVE 19.28 1/4 G M8*1	M.GAZ-VNA-ECA-001
9	FRONT PANEL	YSC-KNX.SNC-LZ-0164
10	CABLE 500MM	M.GAZ-CKM-KBL-004
11	PIOZE LIGHTER Ø:18	M.GAZ-CKM-PIEZ-001
12	BUTTON BUFFER	M.AKS-DGM-EMP-026
13	BUTTON SOCKET 8 MM	M.AKS-DGM-SKT-001
14	BUTTON	M.AKS-DGM-EMP-024
15	M4 FRAME SPRING	M.YAY-PG-004
16	TICKET	JP.M.AKS-OZL-MTL-001
17	M10*35 FOOT	JP.M.AKS-AYK-PLS-002
18	1/2-1/2 40 CM GAS FLEX	M.GAZ-TES-SPR-003
19	GAS FLEX 70CM Ø10 MM 8 MM	M.GAZ-TES-SPR-040
20	GAS FLEX 43CM Ø10 MM 8 MM	M.GAZ-TES-SPR-039
21	REAR BOTTOM SHEET	YSC-KNX.SNC-PN-0111
22	AK16 L:4 CONTRACTING NUT	M.GAZ-TES-SRI-007
23	CONNECTION 1/2	JP.M.MEK-TES-SRI-014
24	BRACKET	JP.M.GAZ-TES-GLV-002
25	GASKET	M.CNT-PLS-KLN-002
26	REAR TOP SHEET	YSC-KNX.SNC-PN-0110
27	CHASSIS	-

I SPARE PART LIST-EXPLODING DRAWING

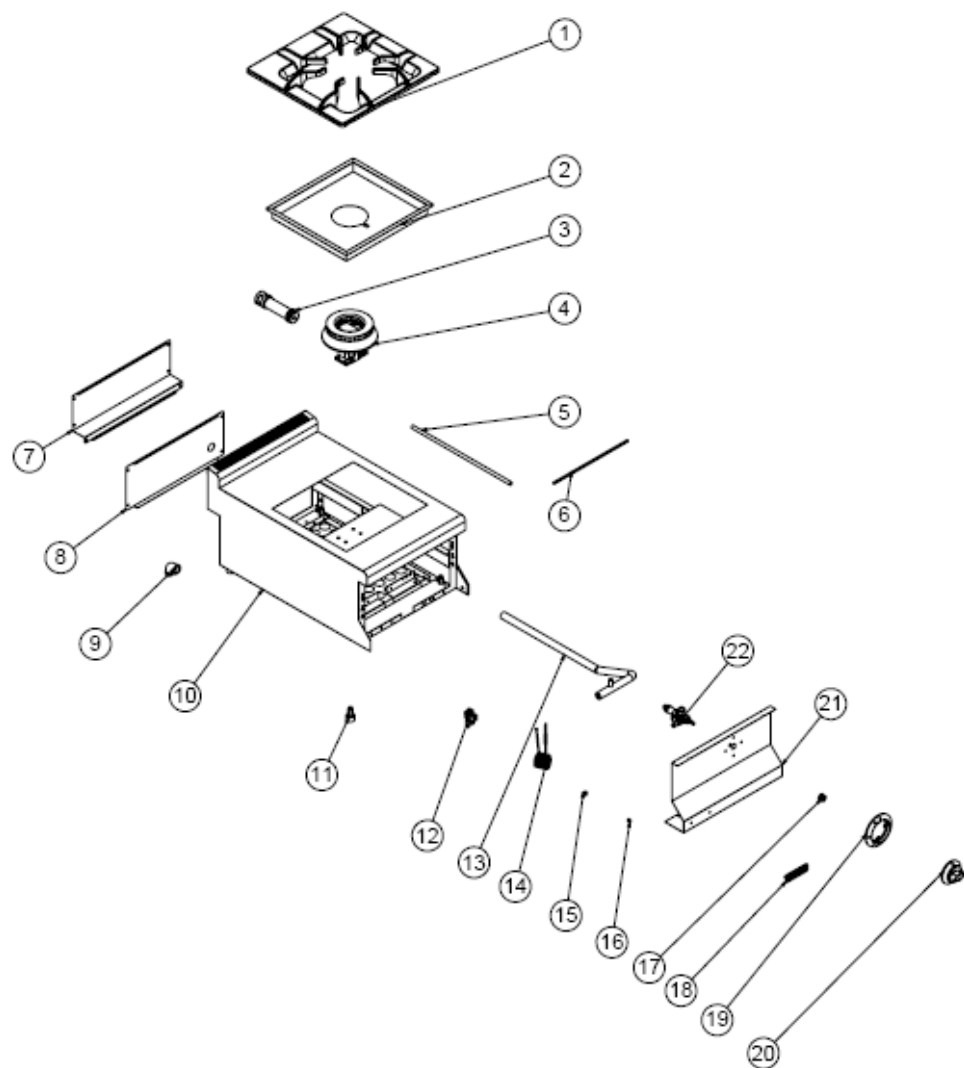


EMP.6KG010-O

GAS RANGES

I SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE: EMP.6KG010-O		
NO	PRODUCT NAME	P.CODE
1	398*393 CASTING FURNACE	M.AKS-DKM-KZN-019
2	SCUM POT	YSC-KNX.SNC-LZ-0325
3	ELBOW 16*1.5/1/4	M.GAZ-TES-SRI-021
4	HORIZONTAL BURNER 13 KW	M.GAZ-BRL-BEK-015
5	GAS FLEX Ø10 MM 60 CM 3/8	M.GAZ-TES-SPR-018
6	FLEXIABLE GAS PIPE30 CM Ø6 MM	M.GAZ-TES-SPR-032
7	REAR TOP SHEET	YSC-KNX.SNC-PN-0105
8	REAR BOTTOM SHEET	YSC-KNX.SNC-PN-0106
9	BRACKET	JP.M.GAZ-TES-GLV-002
10	CHASSIS	-
11	M10*35 FOOT	JP.M.AKS-AYK-PLS-002
12	ADJUSTABLE PILOT 0.25	M.GAZ-PLT-PLT-002
13	GAS TANK	M.GAZ-DPO-SNC-008
14	M8*1200 THERMOELEMENT NO:18	M.GAZ-TRL-003
15	INJECTOR M6*0.75 Ø1.40 MM	M.GAZ-ENJ-LPG-002
16	INJECTOR M6*0,75 Ø2.20 MM.	M.GAZ-ENJ-LPG-003
17	BUTTON SOCKET 8 MM	M.AKS-DGM-SKT-001
18	TICKET	JP.M.AKS-OZL-MTL-001
19	BUTTON BUFFER	M.AKS-DGM-EMP-016
20	BUTTON	M.AKS-DGM-EMP-024
21	FRONT PANEL LEATHER	YSC-KNX.SNC-PN-0184
22	GAS VALVE M8 THREADED	M.GAZ-VNA-ECA-002

I SPARE PART LIST-EXPLODING DRAWING

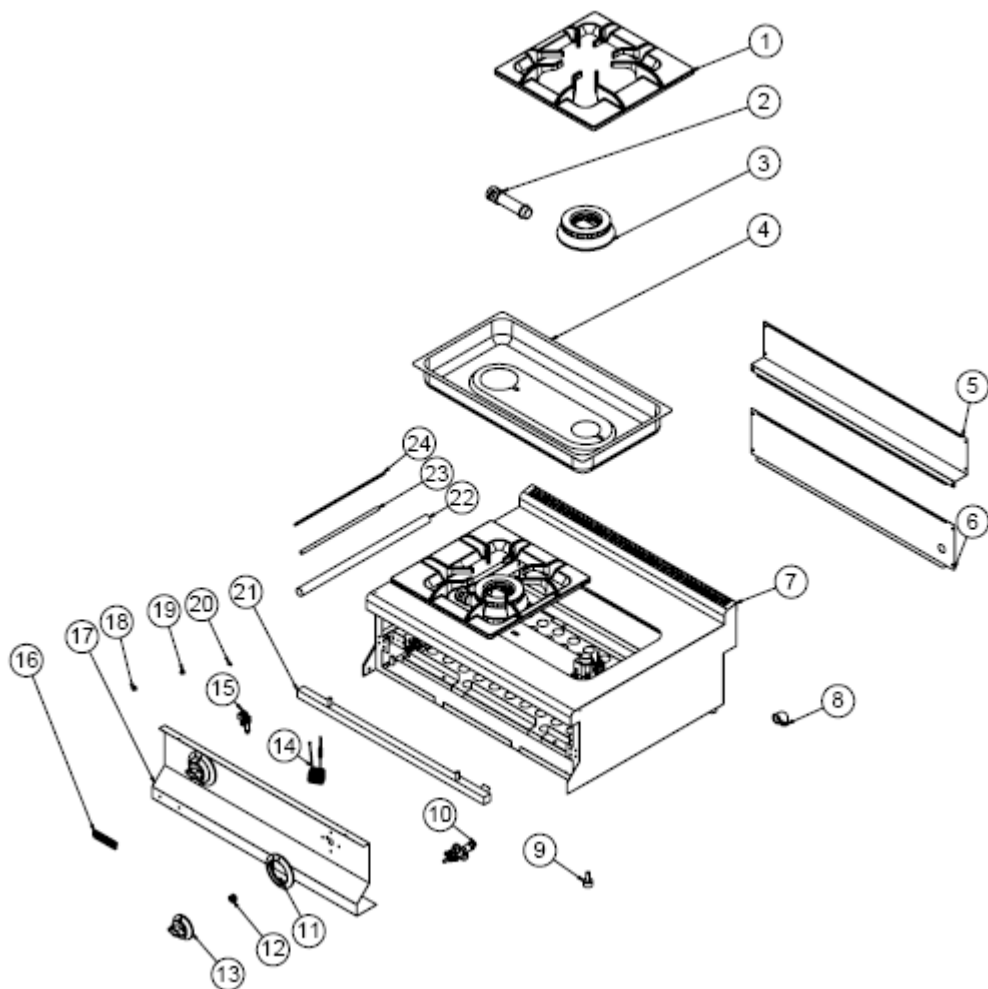


EMP.6KG020-O

GAS RANGES

I SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE: EMP.6KG020-O		
NO	PRODUCT NAME	P.CODE
1	398*393 CASTING FURNACE	M.AKS-DKM-KZN-019
2	ELBOW 16*1.5/1/4	M.GAZ-TES-SRI-021
3	HORIZONTAL BURNER 13 KW	M.GAZ-BRL-BEK-015
4	ANTIQUE PAN	M.MTS-KNX-PG9-020
5	REAR TOP SHEET	YSC-KNX.SNC-PN-0174
6	REAR BOTTOM COVER SHEET METAL	YSC-KNX.SNC-PN-0173
7	CHASSIS	-
8	BRACKET	JP.M.GAZ-TES-GLV-002
9	M10*35 FOOT	JP.M.AKS-AYK-PLS-002
10	GAS VALVE M8 THREADED	M.GAZ-VNA-ECA-002
11	BUTTON BUFFER	M.AKS-DGM-EMP-016
12	BUTTON SOCKET 8 MM	M.AKS-DGM-SKT-001
13	BUTTON	M.AKS-DGM-EMP-024
14	M8*1200 THERMOELEMENT NO:18	M.GAZ-TRL-003
15	ADJUSTABLE PILOT 0.25	M.GAZ-PLT-PLT-002
16	TICKET	JP.M.AKS-OZL-MTL-001
17	FRONT PANEL LEATHER	YSC-KNX.SNC-LZ-0287
18	INJECTOR M6*0.75 Ø1.40 MM	M.GAZ-ENJ-LPG-002
19	INJECTOR M6*0,75 Ø2.20 MM.	M.GAZ-ENJ-LPG-003
20	PILOT 0.25 SHORT LPG INJECTOR	M.GAZ-ENJ-PLT-001
21	GAS TANK	M.GAZ-DPO-PG-043
22	1/2-1/2 50 CM GAS FLEX PIPE	M.GAZ-TES-SPR-002
23	FLEXIABLE GAS PIPEØ10 MM 30 CM 3/8	M.GAZ-TES-SPR-020
24	FLEXIABLE GAS PIPEØ 6 MM 35 CM	M.GAZ-TES-SPR-024

I SPARE PART LIST-EXPLODING DRAWING

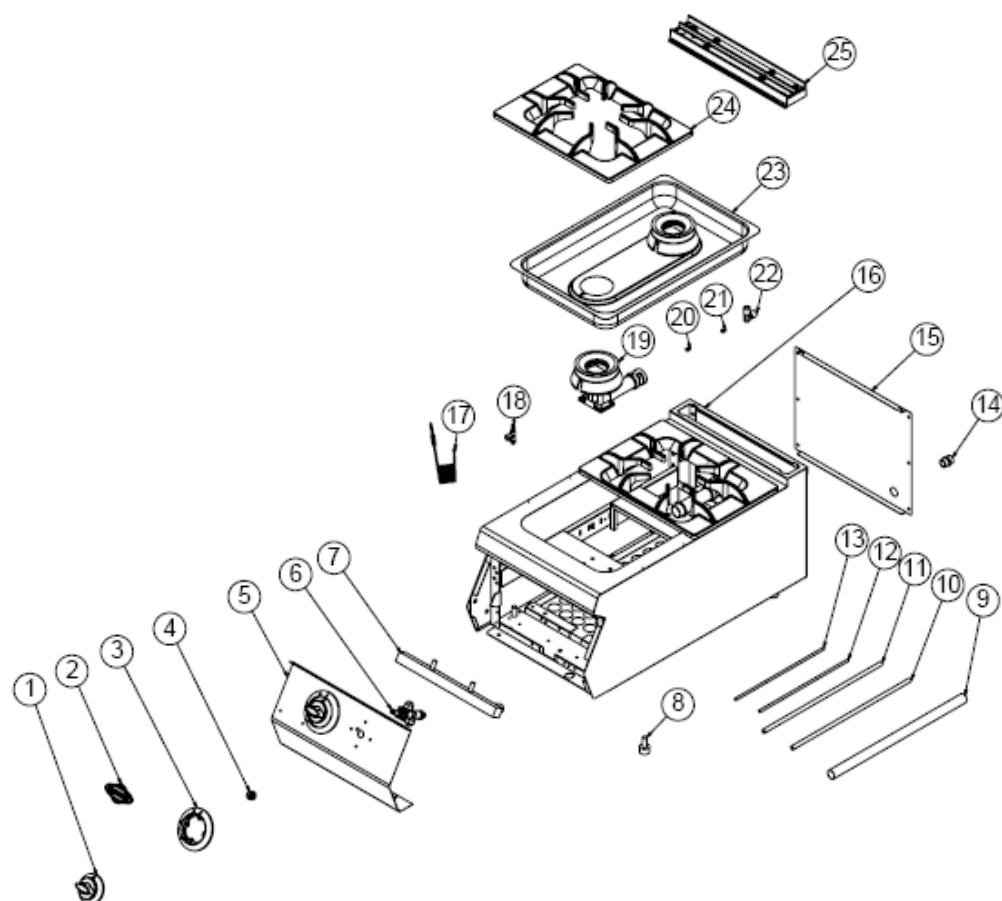


EMP.PLS.7KG010

GAS RANGES

I SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE: EMP.PLS.7KG010		
NO	PRODUCT NAME	P.CODE
1	BUTTON	M.AKS-DGM-EMP-024
2	TICKET	M.AKS-OZL-MTL-006
3	BUTTON BUFFER	M.AKS-DGM-EMP-016
4	BUTTON SOCKET 8 MM	M.AKS-DGM-SKT-001
5	FRONT PANEL	YSC-KNX.PG7-LZ-0436
6	GAS VALVE M8 THREADED	M.GAZ-VNA-ECA-002
7	GAS TANK	M.GAZ-DPO-PG-047
8	M10*35 FOOT	JP.M.AKS-AYK-PLS-002
9	1/2 -1/2 80 CM GAS FLEX	M.GAZ-TES-SPR-009
10	GAS FLEX Ø6 MM 60 CM	M.GAZ-TES-SPR-035
11	GAS FLEX Ø10 MM 70 CM 3/8	M.GAZ-TES-SPR-015
12	FLEXIABLE GAS PIPE30 CM Ø6 MM	M.GAZ-TES-SPR-032
13	GAS FLEX Ø10 MM 50 CM 3/8	M.GAZ-TES-SPR-017
14	CONNECTION 1/2	JP.M.MEK-TES-SRI-014
15	BACK COVER SHEET	JP.YSC-KNX.PG7-PN-0391
16	CHASSIS	-
17	M8*1200 THERMOELEMENT NO:18	M.GAZ-TRL-003
18	ADJUSTABLE PILOT 0.25	M.GAZ-PLT-PLT-002
19	10.5 KW BRÜLÖR	JP.M.GAZ-BRL-BEK-011
20	INJECTOR M6*0.75 Ø1.40 MM	M.GAZ-ENJ-LPG-002
21	INJECTOR M6*0.75 Ø2.00 MM.	M.GAZ-ENJ-LPG-007
22	ELBOW 16*1.5/1/4	M.GAZ-TES-SRI-021
23	ANTIQUÉ PAN	M.MTS-KNX-PG7-039
24	39.8*29 CM CASTING COOKER	M.AKS-DKM-KZN-017
25	40 CM X 7 CM CHIMNEY	JP.M.AKS-DKM-KZN-013

I SPARE PART LIST-EXPLODING DRAWING

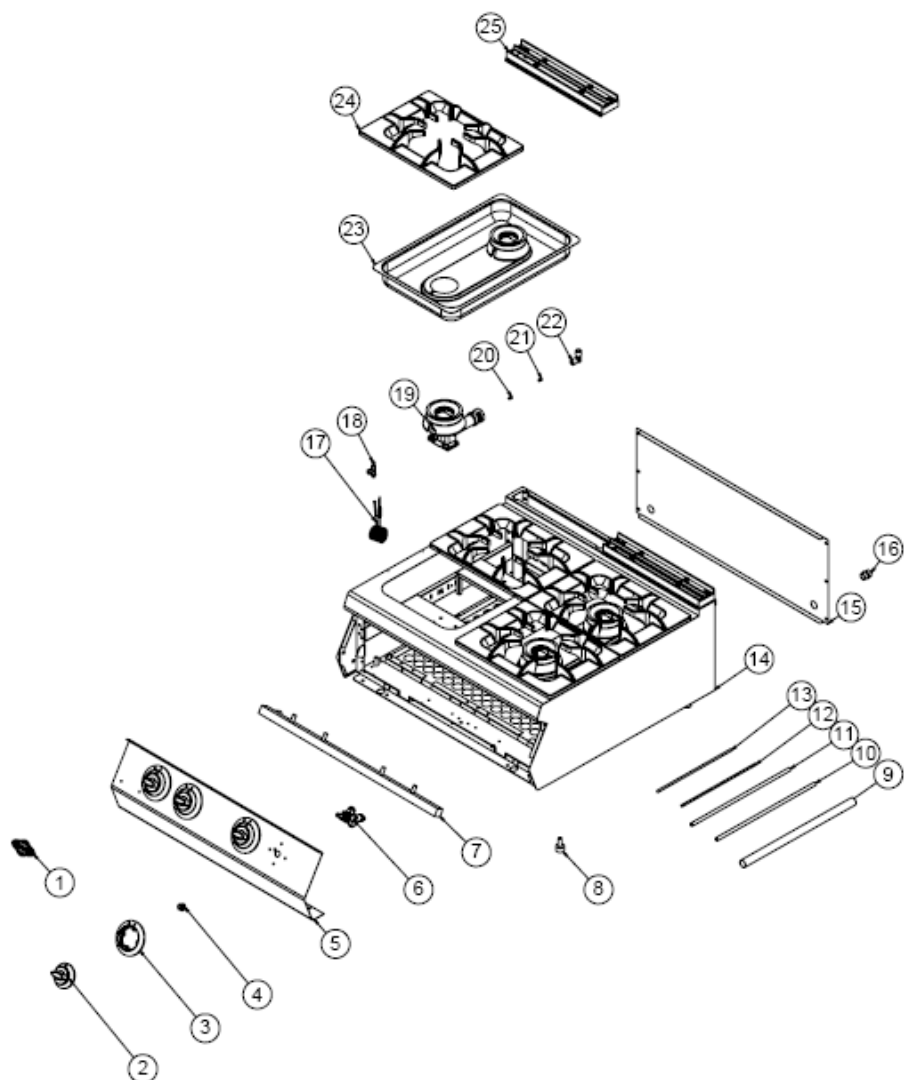


EMP.PLS.7KG020

GAS RANGES

I SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE: EMP.PLS.7KG020		
NO	PRODUCT NAME	P.CODE
1	TICKET	M.AKS-OZL-MTL-006
2	BUTTON	M.AKS-DGM-EMP-024
3	BUTTON BUFFER	M.AKS-DGM-EMP-016
4	BUTTON SOCKET 8 MM	M.AKS-DGM-SKT-001
5	FRONT PANEL	YSC-KNX.PG7-LZ-0439
6	GAS VALVE M8 THREADED	M.GAZ-VNA-ECA-002
7	GAS TANK	M.GAZ-DPO-PG-048
8	M10*35 FOOT	JP.M.AKS-AYK-PLS-002
9	1/2 -1/2 80 CM GAS FLEX	M.GAZ-TES-SPR-009
10	GAS FLEX Ø6 MM 60 CM	M.GAZ-TES-SPR-035
11	GAS FLEX Ø10 MM 70 CM 3/8	M.GAZ-TES-SPR-015
12	FLEXIABLE GAS PIPE30 CM Ø6 MM	M.GAZ-TES-SPR-032
13	GAS FLEX Ø10 MM 50 CM 3/8	M.GAZ-TES-SPR-017
14	CHASSIS	-
15	BACK SHEET METAL	YSC-KNX.PG7-PN-0398
16	CONNECTION 1/2	JP.M.MEK-TES-SRI-014
17	M8*1200 THERMOELEMENT NO:18	M.GAZ-TRL-003
18	ADJUSTABLE PILOT 0.25	M.GAZ-PLT-PLT-002
19	10.5 KW BRÜLÖR	JP.M.GAZ-BRL-BEK-011
20	INJECTOR M6*0.75 Ø1.40 MM	M.GAZ-ENJ-LPG-002
21	INJECTOR M6*0.75 Ø2.00 MM.	M.GAZ-ENJ-LPG-007
22	ELBOW 16*1.5/1/4	M.GAZ-TES-SRI-021
23	ANTIQUÉ PAN	M.MTS-KNX-PG7-039
24	39.8*29 CM CASTING COOKER	M.AKS-DKM-KZN-017
25	40 CM X 7 CM CHIMNEY	JP.M.AKS-DKM-KZN-013

I SPARE PART LIST-EXPLODING DRAWING

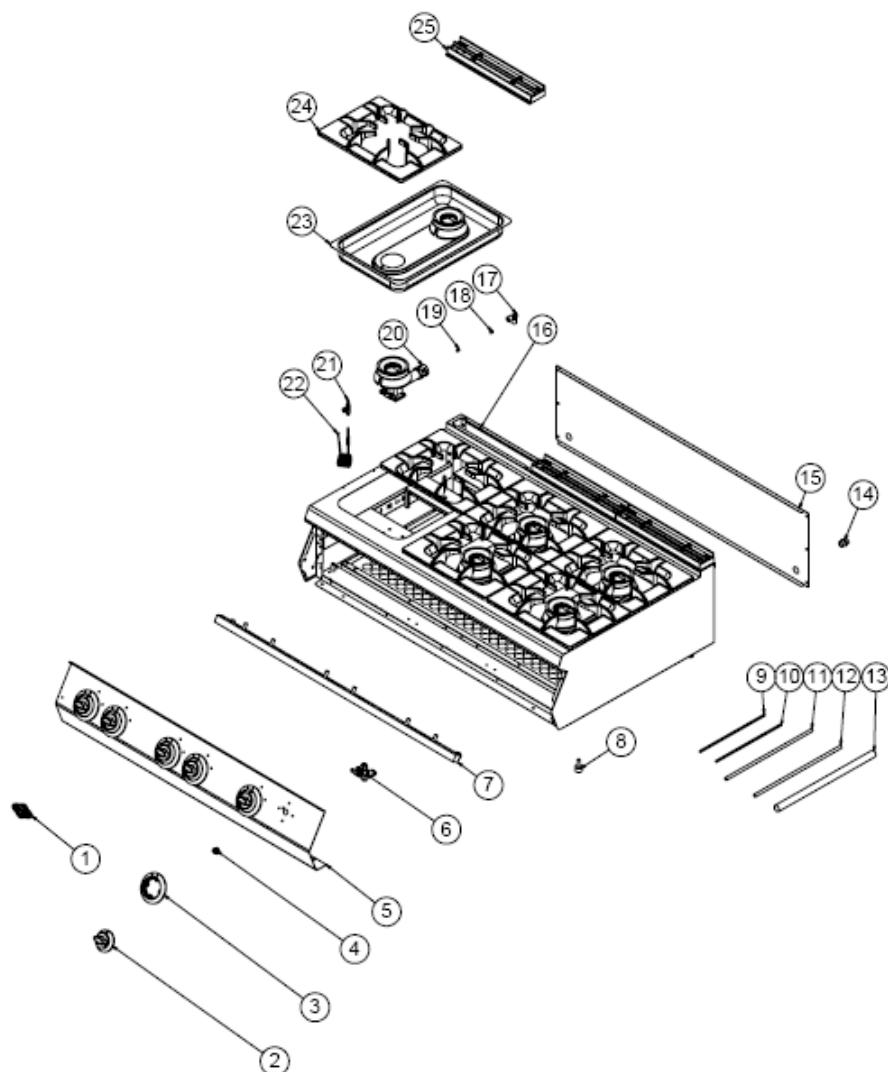


EMP.PLS.7KG030

GAS RANGES

I SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE: EMP.PLS.7KG030		
NO	PRODUCT NAME	P.CODE
1	TICKET	M.AKS-OZL-MTL-006
2	BUTTON	M.AKS-DGM-EMP-024
3	BUTTON BUFFER	M.AKS-DGM-EMP-016
4	BUTTON SOCKET 8 MM	M.AKS-DGM-SKT-001
5	FRONT PANEL	YSC-KNX.PG7-LZ-0441
6	GAS VALVE M8 THREADED	M.GAZ-VNA-ECA-002
7	GAS TANK	M.GAZ-DPO-PG-049
8	M10*35 FOOT	JP.M.AKS-AYK-PLS-002
9	GAS FLEX Ø10 MM 50 CM 3/8	M.GAZ-TES-SPR-017
10	FLEXIABLE GAS PIPE30 CM Ø6 MM	M.GAZ-TES-SPR-032
11	GAS FLEX Ø10 MM 70 CM 3/8	M.GAZ-TES-SPR-015
12	GAS FLEX Ø6 MM 60 CM	M.GAZ-TES-SPR-035
13	1/2 -1/2 80 CM GAS FLEX	M.GAZ-TES-SPR-009
14	CONNECTION 1/2	JP.M.MEK-TES-SRI-014
15	BACK SHEET METAL	YSC-KNX.PG7-LZ-0435
16	CHASSIS	-
17	ELBOW 16*1.5/1/4	M.GAZ-TES-SRI-021
18	INJECTOR M6*0.75 Ø1.40 MM	M.GAZ-ENJ-LPG-002
19	INJECTOR M6*0.75 Ø2.00 MM.	M.GAZ-ENJ-LPG-007
20	10.5 KW BRÜLÖR	JP.M.GAZ-BRL-BEK-011
21	ADJUSTABLE PILOT 0.25	M.GAZ-PLT-PLT-002
22	M8*1200 THERMOELEMENT NO:18	M.GAZ-TRL-003
23	ANTIQUÉ PAN	M.MTS-KNX-PG7-039
24	39.8*29 CM CASTING COOKER	M.AKS-DKM-KZN-017
25	40 CM X 7 CM CHIMNEY	JP.M.AKS-DKM-KZN-013

I SPARE PART LIST-EXPLODING DRAWING

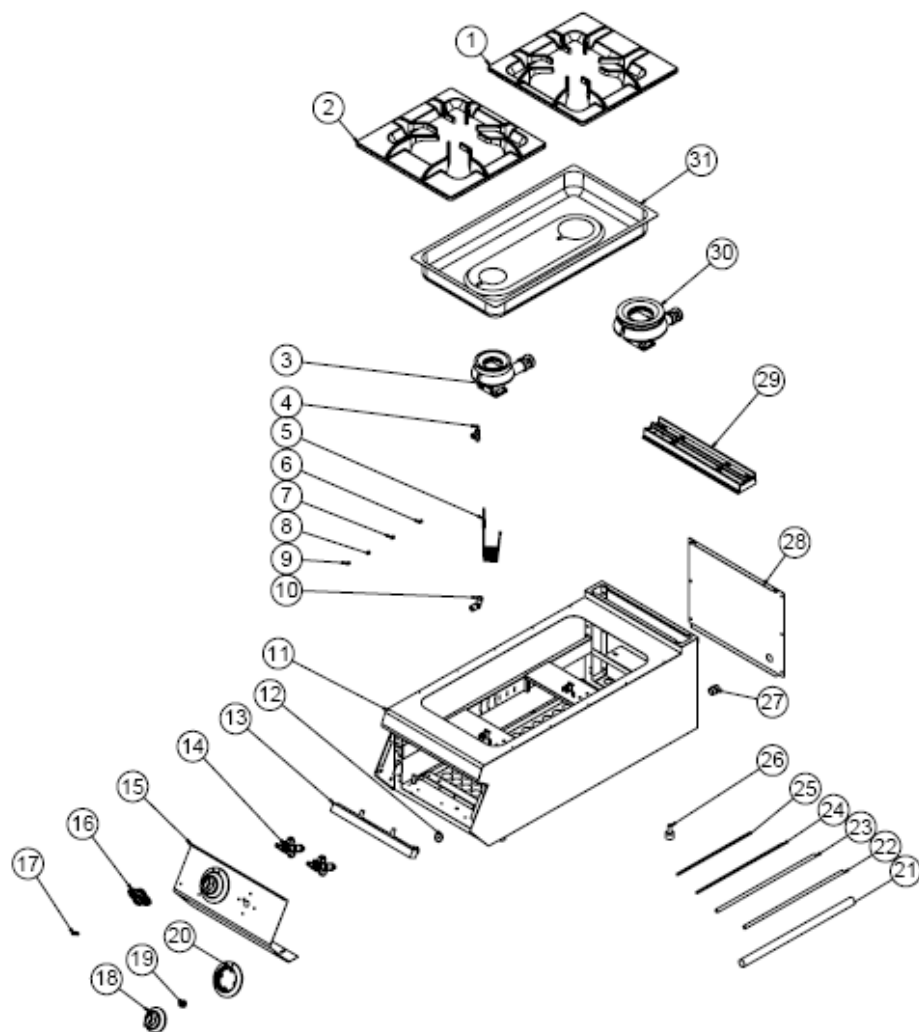


EMP.PLS.9KG010

GAS RANGES

I SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE: EMP.PLS.9KG010		
NO	PRODUCT NAME	P.CODE
1	398*393 CASTING FURNACE	M.AKS-DKM-KZN-019
2	398*393 CASTING FURNACE	M.AKS-DKM-KZN-018
3	10.5 KW BRÜLÖR	JP.M.GAZ-BRL-BEK-011
4	ADJUSTABLE PILOT 0.25	M.GAZ-PLT-PLT-002
5	M8*1200 THERMOELEMENT NO:18	M.GAZ-TRL-003
6	INJECTOR M6*0.75 Ø1.40 MM	M.GAZ-ENJ-LPG-002
7	INJECTOR M6*0.75 Ø2.00 MM.	M.GAZ-ENJ-LPG-007
8	INJECTOR M6*0.75 Ø2.40 MM.	M.GAZ-ENJ-LPG-009
9	INJECTOR M6*0.75 Ø1,60 MM	M.GAZ-ENJ-NG-004
10	ELBOW 16*1.5/1/4	M.GAZ-TES-SRI-021
11	CHASSIS	-
12	GASKET	M.CNT-PLS-KLN-002
13	GAS TANK	M.GAZ-DPO-PG-047
14	GAS VALVE M8 THREADED	M.GAZ-VNA-ECA-002
15	FRONT PANEL	YSC-KNX.PG9-LZ-0761
16	TICKET	M.AKS-OZL-MTL-006
17	M4 FRAME SPRING	M.YAY-PG-004
18	BUTTON	M.AKS-DGM-EMP-024
19	BUTTON SOCKET 8 MM	M.AKS-DGM-SKT-001
20	BUTTON BUFFER	M.AKS-DGM-EMP-016
21	1/2 -1/2 80 CM GAS FLEX	M.GAZ-TES-SPR-009
22	GAS FLEX Ø10 MM 50 CM 3/8	M.GAZ-TES-SPR-017
23	FLEXIABLE GAS PIPEØ10 MM 80 CM 3/8	M.GAZ-TES-SPR-021
24	FLEXIABLE GAS PIPEØ 6 MM 35 CM	M.GAZ-TES-SPR-024
25	GAS FLEX Ø6 MM 70 CM	M.GAZ-TES-SPR-037
26	M10*35 FOOT	JP.M.AKS-AYK-PLS-002
27	CONNECTION 1/2	JP.M.MEK-TES-SRI-014
28	BACK COVER SHEET	JP.YSC-KNX.PG7-PN-0391
29	40 CM X 7 CM CHIMNEY	JP.M.AKS-DKM-KZN-013
30	HORIZONTAL BURNER 13 KW	M.GAZ-BRL-BEK-015
31	ANTIQUE PAN	M.MTS-KNX-PG9-020

I SPARE PART LIST-EXPLODING DRAWING

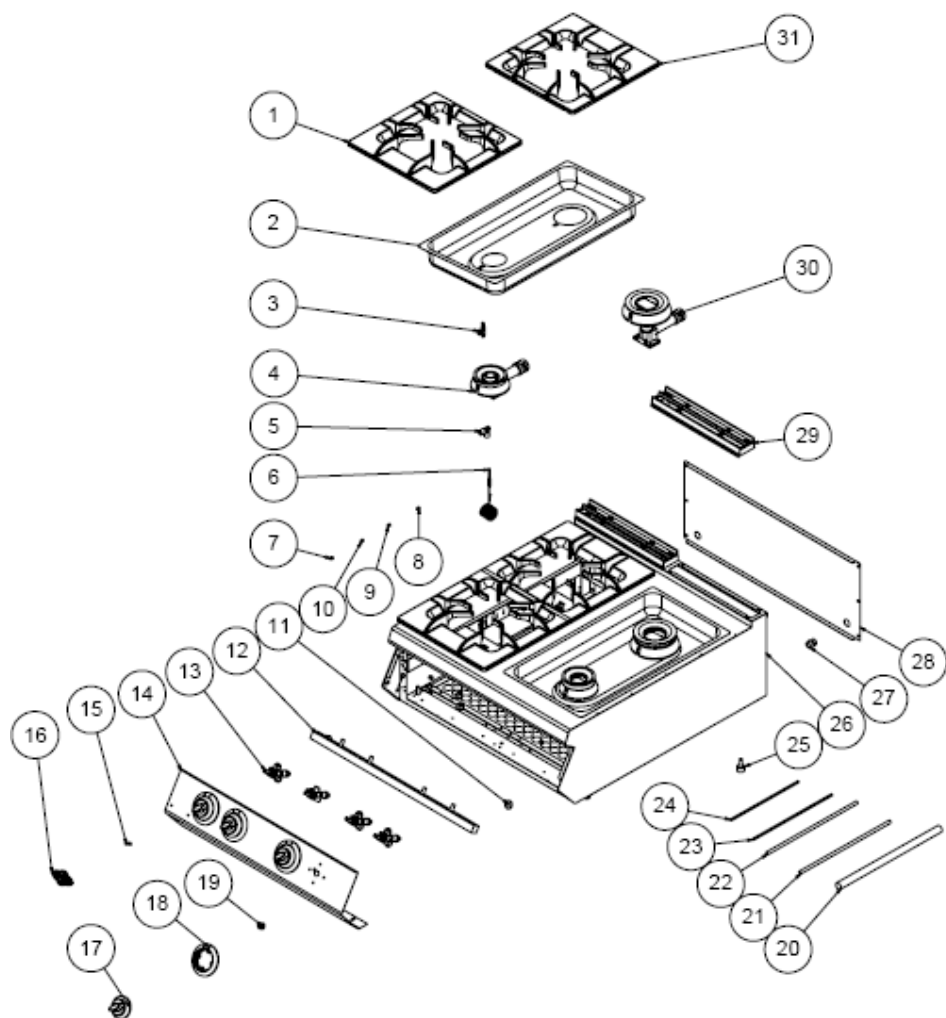


EMP.PLS.9KG020

GAS RANGES

I SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE: EMP.PLS.9KG020		
NO	PRODUCT NAME	P.CODE
1	398*393 CASTING FURNACE	M.AKS-DKM-KZN-018
2	ANTIQUE PAN	M.MTS-KNX-PG9-020
3	ADJUSTABLE PILOT 0.25	M.GAZ-PLT-PLT-002
4	10.5 KW BRÜLÖR	JP.M.GAZ-BRL-BEK-011
5	ELBOW 16*1.5/1/4	M.GAZ-TES-SRI-021
6	M8*1200 THERMOELEMENT NO:18	M.GAZ-TRL-003
7	INJECTOR M6*0.75 Ø1.40 MM	M.GAZ-ENJ-LPG-002
8	INJECTOR M6*0.75 Ø2.00 MM.	M.GAZ-ENJ-LPG-007
9	INJECTOR M6*0.75 Ø2.40 MM.	M.GAZ-ENJ-LPG-009
10	INJECTOR M6*0.75 Ø1,60 MM	M.GAZ-ENJ-NG-004
11	GASKET	M.CNT-PLS-KLN-002
12	GAS TANK	M.GAZ-DPO-PG-048
13	GAS VALVE M8 THREADED	M.GAZ-VNA-ECA-002
14	FRONT PANEL	YSC-KNX.PG9-LZ-0762
15	M4 FRAME SPRING	M.YAY-PG-004
16	TICKET	M.AKS-OZL-MTL-006
17	BUTTON	M.AKS-DGM-EMP-024
18	BUTTON BUFFER	M.AKS-DGM-EMP-016
19	BUTTON SOCKET 8 MM	M.AKS-DGM-SKT-001
20	1/2 -1/2 80 CM GAS FLEX	M.GAZ-TES-SPR-009
21	GAS FLEX Ø10 MM 50 CM 3/8	M.GAZ-TES-SPR-017
22	FLEXIABLE GAS PIPEØ10 MM 80 CM 3/8	M.GAZ-TES-SPR-021
23	FLEXIABLE GAS PIPEØ 6 MM 35 CM	M.GAZ-TES-SPR-024
24	GAS FLEX Ø6 MM 70 CM	M.GAZ-TES-SPR-037
25	M10*35 FOOT	JP.M.AKS-AYK-PLS-002
26	CHASSIS	-
27	CONNECTION 1/2	JP.M.MEK-TES-SRI-014
28	BACK SHEET METAL	YSC-KNX.PG7-PN-0398
29	40 CM X 7 CM CHIMNEY	JP.M.AKS-DKM-KZN-013
30	HORIZONTAL BURNER 13 KW	M.GAZ-BRL-BEK-015
31	398*393 CASTING FURNACE	M.AKS-DKM-KZN-019

I SPARE PART LIST-EXPLODING DRAWING

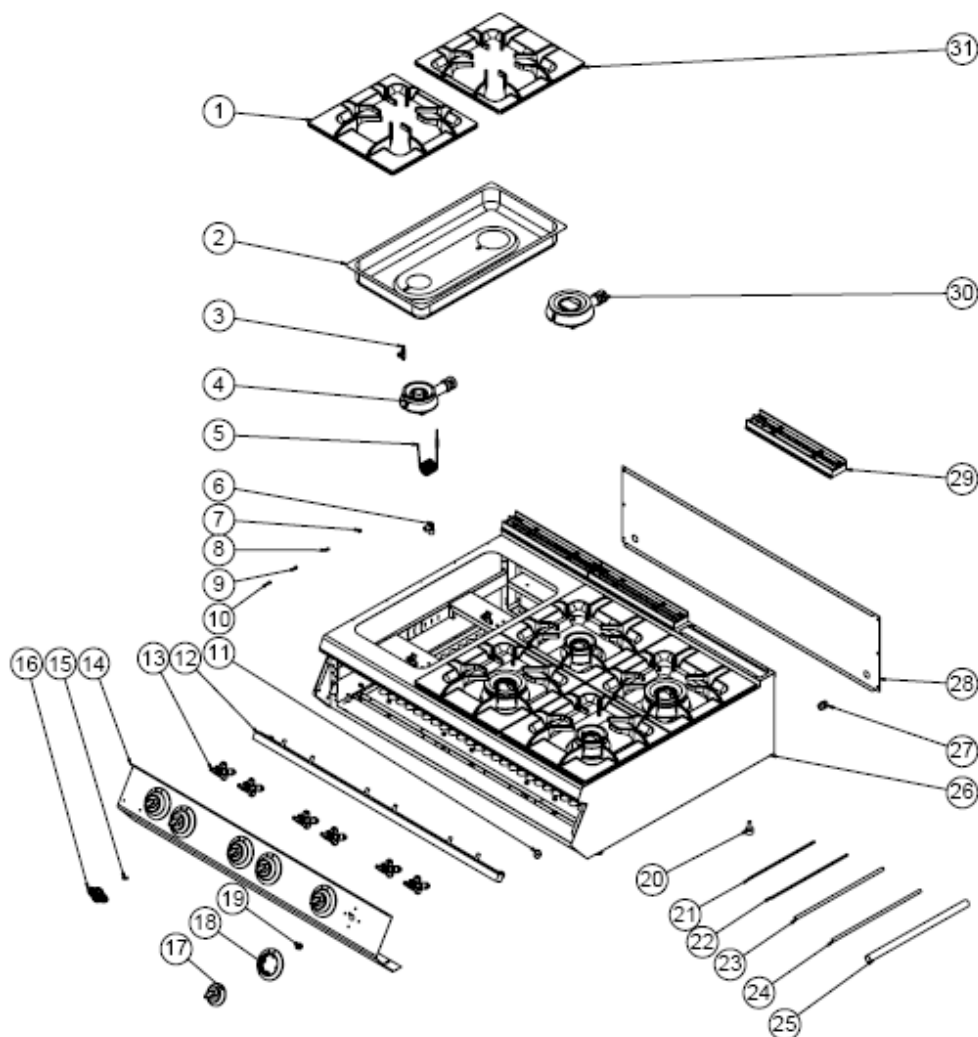


EMP.PLS.9KG030

GAS RANGES

I SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE: EMP.PLS.9KG030		
NO	PRODUCT NAME	P.CODE
1	398*393 CASTING FURNACE	M.AKS-DKM-KZN-018
2	ANTIQUE PAN	M.MTS-KNX-PG9-020
3	ADJUSTABLE PILOT 0.25	M.GAZ-PLT-PLT-002
4	10.5 KW BRÜLÖR	JP.M.GAZ-BRL-BEK-011
5	M8*1200 THERMOELEMENT NO:18	M.GAZ-TRL-003
6	ELBOW 16*1.5/1/4	M.GAZ-TES-SRI-021
7	INJECTOR M6*0.75 Ø1.40 MM	M.GAZ-ENJ-LPG-002
8	INJECTOR M6*0.75 Ø2.00 MM.	M.GAZ-ENJ-LPG-007
9	INJECTOR M6*0.75 Ø2.40 MM.	M.GAZ-ENJ-LPG-009
10	INJECTOR M6*0.75 Ø1,60 MM	M.GAZ-ENJ-NG-004
11	GASKET	M.CNT-PLS-KLN-002
12	GAS TANK	M.GAZ-DPO-PG-049
13	GAS VALVE M8 THREADED	M.GAZ-VNA-ECA-002
14	FRONT PANEL	YSC-KNX.PG9-LZ-0763
15	M4 FRAME SPRING	M.YAY-PG-004
16	TICKET	M.AKS-OZL-MTL-006
17	BUTTON	M.AKS-DGM-EMP-024
18	BUTTON BUFFER	M.AKS-DGM-EMP-016
19	BUTTON SOCKET 8 MM	M.AKS-DGM-SKT-001
20	M10*35 FOOT	JP.M.AKS-AYK-PLS-002
21	1/2 -1/2 80 CM GAS FLEX	M.GAZ-TES-SPR-009
22	GAS FLEX Ø10 MM 50 CM 3/8	M.GAZ-TES-SPR-017
23	FLEXIABLE GAS PIPEØ10 MM 80 CM 3/8	M.GAZ-TES-SPR-021
24	FLEXIABLE GAS PIPEØ 6 MM 35 CM	M.GAZ-TES-SPR-024
25	GAS FLEX Ø6 MM 70 CM	M.GAZ-TES-SPR-037
26	CHASSIS	-
27	CONNECTION 1/2	JP.M.MEK-TES-SRI-014
28	BACK SHEET METAL	YSC-KNX.PG7-LZ-0435
29	40 CM X 7 CM CHIMNEY	JP.M.AKS-DKM-KZN-013
30	HORIZONTAL BURNER 13 KW	M.GAZ-BRL-BEK-015
31	398*393 CASTING FURNACE	M.AKS-DKM-KZN-019

I SPARE PART LIST-EXPLODING DRAWING

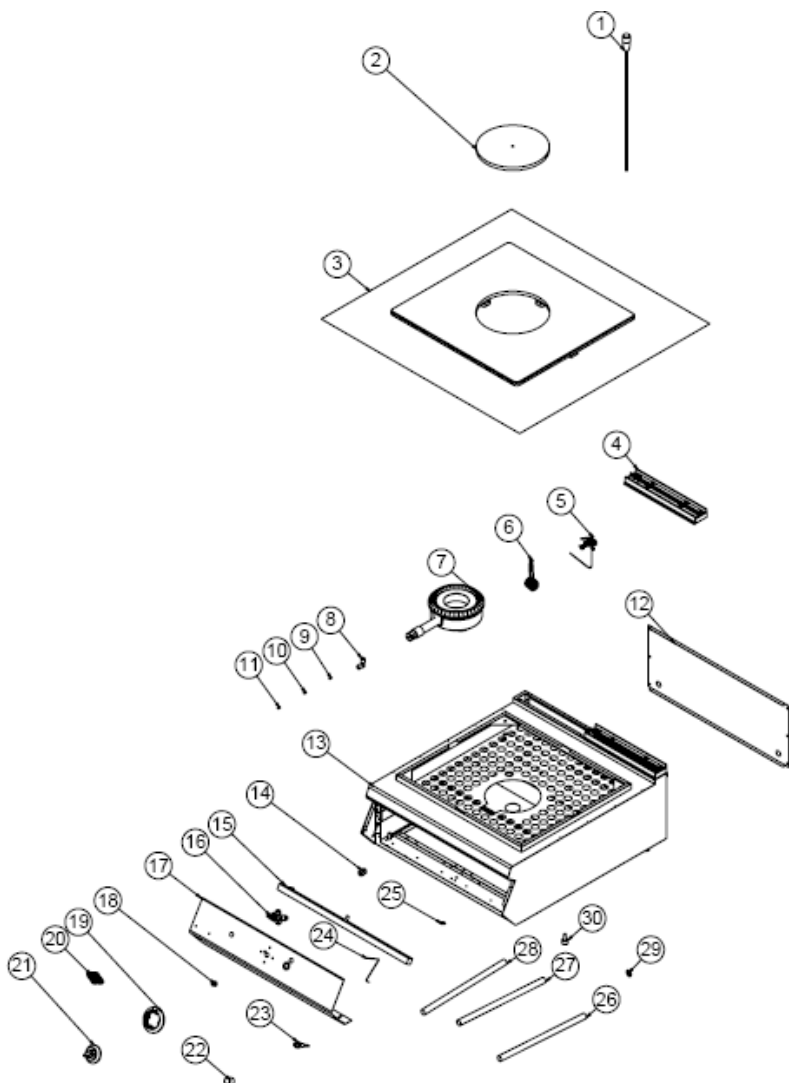


EMP.PLS.9KG020-O

GAS RANGES

I SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE: EMP.PLS.9KG020-O		
NO	PRODUCT NAME	P.CODE
1	NO:3 HANDLE	M.AKS-KLP-BKL-020
2	TOP COVER	M.PLTN-MUH-SYH-044
3	PLATINUM	ARA-KNX.PG9-0008
4	40 CM X 7 CM CHIMNEY	JP.M.AKS-DKM-KZN-013
5	PILOT GROUP TEAM	M.GAZ-PLT-PLT-001
6	M8*1200 THERMOELEMENT NO:18	M.GAZ-TRL-003
7	BURNER LNG	M.GAZ-BRL-BEK-006
8	3/8 16*1.5 M.8 0.75 L SHAPED PIPE	M.GAZ-TES-SRI-023
9	0,30 MM LPG INJECTOR	M.GAZ-ENJ-PLT-002
10	INJECTOR M8*0.75 Ø 1.50 MM.	JP.M.GAZ-ENJ-LPG-012
11	ENJEKTOR M8*0.75 Ø 2.50 MM.	M.GAZ-ENJ-NG-008
12	BACK SHEET METAL	YSC-KNX.PG7-PN-0809
13	CHASSIS	-
14	CONNECTION 1/2	JP.M.MEK-TES-SRI-014
15	ANGELED PIPE	M.GAZ-DPO-PG-092
16	GAS VALVE M8 THREADED	M.GAZ-VNA-ECA-002
17	FRONT PANEL SHEET METAL	YSC-KNX.PG9-LZ-0936
18	BUTTON SOCKET 8 MM	M.AKS-DGM-SKT-001
19	BUTTON BUFFER	M.AKS-DGM-EMP-016
20	TICKET	M.AKS-OZL-MTL-006
21	BUTTON	M.AKS-DGM-EMP-024
22	LIGHTER GUARD	M.GAZ--PIEZ-KRM
23	PIOZE LIGHTER Ø:18	M.GAZ-CKM-PIEZ-001
24	CABLE 500MM	M.GAZ-CKM-KBL-004
25	M4 FRAME SPRING	M.YAY-PG-004
26	1/2 -1/2 80 CM GAS FLEX	M.GAZ-TES-SPR-009
27	FLEXIABLE GAS PIPEØ10 MM 40 CM 3/8	M.GAZ-TES-SPR-014
28	GAZ FLEKSI Ø6 MM 50 CM	M.GAZ-TES-SPR-034
29	GASKET	M.CNT-PLS-KLN-002
30	M10*35 FOOT	JP.M.AKS-AYK-PLS-002

I SPARE PART LIST-EXPLODING DRAWING

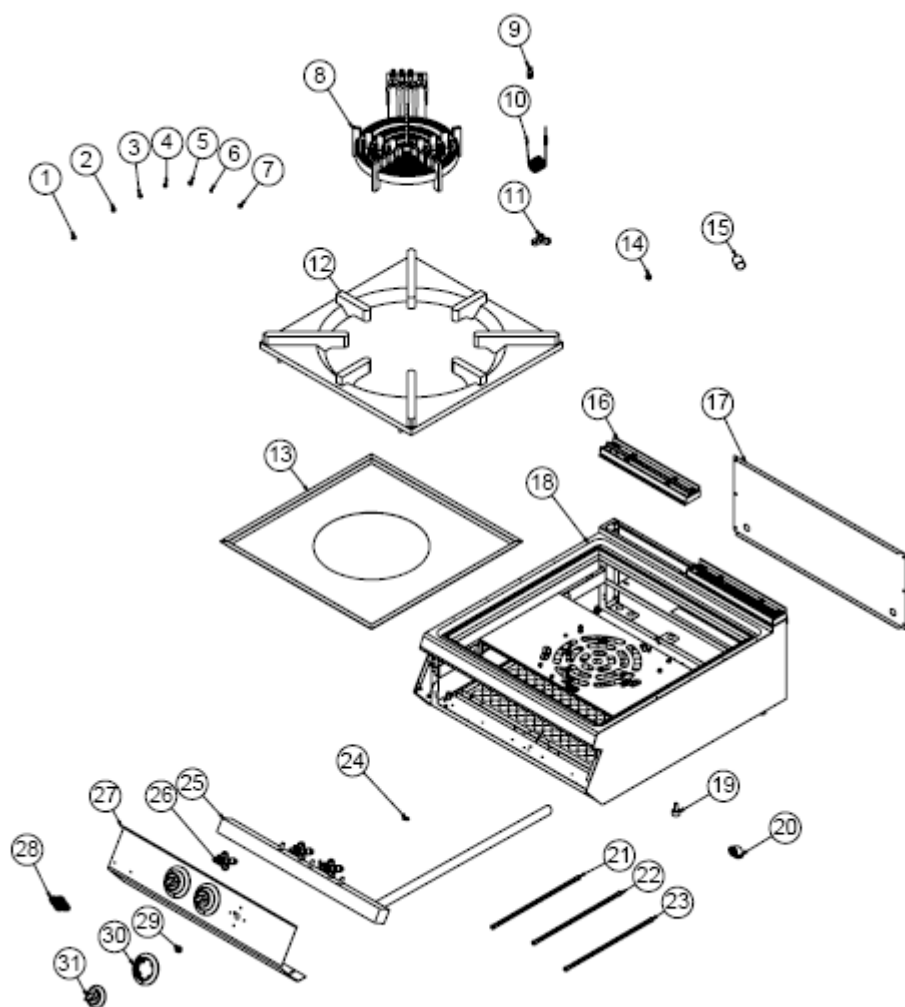

EMP.PLS.9YRG80

GAS RANGES

I SPARE PART LIST-EXPLODING DRAWING

PRODUCT CODE : EMP.PLS.9YRG80		
NO	PRODUCT NAME	P.CODE
1	INJECTOR M8*0.75 Ø 1.20 MM.	M.GAZ-ENJ-LPG-011
2	INJECTOR M8*0.75 Ø 1.50 MM.	JP.M.GAZ-ENJ-LPG-012
3	INJECTOR M8*0.75 Ø 1.80 MM.	M.GAZ-ENJ-NG-006
4	INJECTOR M8*0.75 Ø 3.00 MM.	M.GAZ-ENJ-NG-009
5	INJECTOR M8*0.75 Ø2.00 MM.	M.GAZ-ENJ-NG-010
6	INJECTOR M8*0.75 Ø1.10 MM	M.GAZ-ENJ-NG-013
7	INJECTOR M8*0.75 Ø 0.70 MM	M.GAZ-ENJ-NG-018
8	BURNER	M.GAZ-BRL-DKM-005
9	3/8 16*1.5 M.8 0.75 L SHAPED PIPE	M.GAZ-TES-SRI-023
10	M8*1200 MM NO:19 THERMOCOUPLE	M.GAZ-TRL-005
11	T PIPE 3/8-3/8-3/8 (M16*1.5) 301021326	M.GAZ-TES-SRI-004
12	70*70 CM CASTING COOKER	M.AKS-DKM-KZN-016
13	STRAIN PAN	YSC-KNX.PG9-LZ-0555
14	NIPPLE 3/4	M.GAZ-TES-GLV-011
15	REDUCTION 1*3/4 CASTING	M.GAZ-TES-GLV-010
16	40 CM X 7 CM CHIMNEY	JP.M.AKS-DKM-KZN-013
17	BACK SHEET METAL	YSC-KNX.PG7-PN-0398
18	CHASSIS	-
19	M10*35 FOOT	JP.M.AKS-AYK-PLS-002
20	1" ELBOW	M.GAZ-TES-GLV-013
21	GAS FLEX Ø10 MM 20 CM 3/8	M.GAZ-TES-SPR-013
22	FLEXIABLE GAS PIPE Ø 10 MM 7 CM 3/8	M.GAZ-TES-SPR-027
23	FLEXIABLE GAS PIPE Ø10 MM 15 CM 3/8	M.GAZ-TES-SPR-028
24	M4 FRAME SPRING	M.YAY-PG-004
25	ANGELED PIPE	M.GAZ-DPO-PG-032
26	GAS VALVE	M.GAZ-VNA-ECA-008
27	FRONT PANEL SHEET	YSC-KNX.PG9-LZ-0557
28	TICKET	M.AKS-OZL-MTL-006
29	BUTTON SOCKET 8 MM	M.AKS-DGM-SKT-001
30	BUTTON BUFFER	M.AKS-DGM-EMP-016
31	BUTTON	M.AKS-DGM-EMP-024