

REFRIGERATED COUNTERS (FAN COOLING)

CONTENTS

A	GENERAL INFORMATION	Page 2
A1	PRODUCT DESCRIPTION	Page 3
A2	TECHNICAL INFORMATION	Page 3
A3	TRANSPORTATION	Page 4
A4	UNPACKING	Page 4
B	INSTALLATION	Page 4
C	SAFETY INSTRUCTIONS.....	Page 5
D	OPERATION	Page 6
E	CLEANING & MAINTENANCE.....	Page 6
F	TROUBLESHOOTING.....	Page 7
G	SPARE PART LIST- EXPLODING DRAWING.....	Page 8
H	ELECTRIC CIRCUIT SCHEMA	Page 24



REFRIGERATED COUNTERS (FAN COOLING)

A GENERAL INFORMATION

Before installing the appliance, read operation and maintenance instructions carefully. Wrong installation and part changing may damage the product or may cause injury on people. These are not in our company's responsibility to damage the appliance intentionally, negligence, detriments because of disobeying instructions and regulations, wrong connections. Unauthorized intervention to appliance invalidates the warranty.

1. This instruction manual should be kept in a safe place for future reference.
2. **Installation should be made in accordance with ordinances and security rules of that country by a qualified service personnel.**
3. This appliance has to be used by trained person.
4. Please turn off the appliance immediately in the event of malfunction or failure. The appliance should be repaired only by authorized service personnel. Please demand original spare part.

REFRIGERATED COUNTERS (FAN COOLING)

A1 PRODUCT DESCRIPTION

*The Professional Refrigerated Counters(Fan Cooling) ,that provides high efficiency has been designed to be used in industrial kitchen.

Product Code	Dimensions (mm)	Weight (kg)	Packaging Dimensions (mm)
EMP.125.60.01	1250x600x850	86	1290x630x890
EMP.125.70.01	1250x700x850	86	1290x730x890
EMP.150.60.01	1500x600x850	106	1540x630x970
EMP.150.70.01	1500x700x850	115	1540x730x970
EMP.200.60.01	2000x600x850	135	2040x630x970
EMP.200.70.01	2000x700x850	142	2040x730x970
EMP.255.60.01	2550x600x850	176	2600x630x970
EMP.255.70.01	2550x700x850	186	2600x730x970

A2 TECHNICAL INFORMATION

Kodu	Capacity (Lt)	Gas type	Gas (gr)	Power (KW)
EMP.125.60.01	175	R-290	70	0,14
EMP.125.70.01	200	R-290	90	0,14
EMP.150.60.01	250	R-290	130	0,14
EMP.150.70.01	300	R-290	130	0,14
EMP.200.60.01	400	R-290	140	0,16
EMP.200.70.01	500	R-290	140	0,16
EMP.255.60.01	550	R-290	150	0,20
EMP.255.70.01	700	R-290	150	0,20

Operating Voltage (V)	220-230
Cable (mm ²)	3x1,5
Fuse (A)	25
Operating Range (°C)	+0 / +5
Density (kg/m ³)	40

REFRIGERATED COUNTERS (FAN COOLING)

A3 TRANSPORTATION

*This appliance can not be moved by hand from area to area. It must be moved on pallet with forklift truck.

A4 UNPACKING

*Please unpack the package according to the security codes and ordinances of current country and get rid from the pack. Parts which contacts with food are produced by stainless steel. All plastic parts are marked by material's symbol.

*Please check that all the parts of appliance had come completely and if they are damaged or not during the shipping.

B INSTALLATION

*Please place the product to straight and sturdy ground, please take necessary steps against possibility of overturn.

*Technician who will serve for installation and service for the appliance must be professional on this subject and must have installation and service licenses by the company.

*Connection to Electric Power Supply must be done by authorized person.

*Please be sure that the voltage connected to appliance must be equal with the voltage which is on appliance's label.



This appliance must be connected to an earthed outlet in accordance with safety rules and standard.

*Appliance's earthing must be connected to earthing line on panel which is nearest to electric installation.

*Connection to the main fuse and leak current fuse must be done in accordance with the current regulations.

*If the 2 appliance will be placed adjacently, there must be at least 2 cm space between them. The Condensation is prevented.

REFRIGERATED COUNTERS (FAN COOLING)

C SAFETY INSTRUCTIONS



*Do not use the appliance in insufficient lighted place.



*Do not touch the moving attachments while the appliance operates.



*Do not install the appliance in the presence of flammable or explosive materials.



*Do not operate the appliance when the machine is empty.



*Do not load so less or more than appliance's capacity.



*Do not attempt to use the appliance without suitable protective equipments.



*Because of any reason if there is a fire or flame flare where the appliance is used, turn off all gas valves and electric contactor switch quickly and use fire extinguisher. Never use water to extinguish the fire.



*All the damages because of not having earthing connection will not be on warranty.



*Prevent the appliance to take sunshine directly.




*Do not place heavy objects on to the appliance.

REFRIGERATED COUNTERS (FAN COOLING)

D OPERATION

*Control Panel;

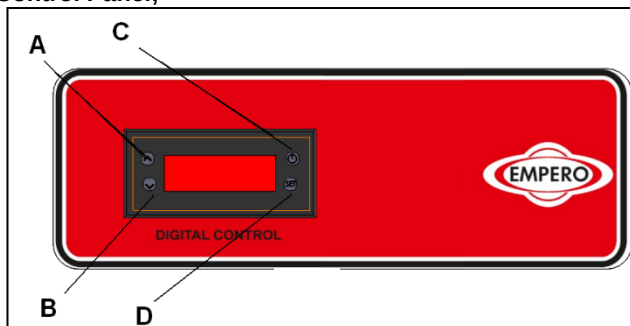

- A : Degree increase
- B : Degree reduce
- C : Indicator ON/OFF
- D : SET approval button
- E : ON position
- F : OFF position

*Operating;

- Clean the inner and outer surface of the appliance with warm cloth before first use. Then clean with wet cloth and dry.
- Plug in the appliance.
- Activate ON/OFF button at control panel.
- Set the temperature of the appliance with up-down arrows.
- Operate the appliance for 12 hours when it is empty. at first use .Meanwhile do not open the lids.
- After inserting the products to the appliance, close the lids.
- If the lids are opened often or left opened, these situations can effect the cooling of the products.
- When the appliance is not needed to be used, switch OFF and unplug the appliance.

E CLEANING & MAINTENANCE

➤ CLEANING AND MAINTENANCE AFTER EVERY USE

- Always turn off the appliance and disconnect from the power supply before cleaning.
- Clean the inner surfaces and shelves with moist cloth and then dry after every evacuation of material.
- Clean the control panel with dry cloth.
- Pay attention the cleaning materials to be hygienic.
- Do not use abrasive cleaning chemicals as these can leave harmful residues.

REFRIGERATED COUNTERS (FAN COOLING)

- Do not clean the appliance by spraying water directly ,otherwise electric motor may get damaged.

➤ PERIODIC CLEANING AND MAINTENANCE

- Maintenance should be done by qualified person.
- Get the periodic maintenance of the appliance once in every 15 days.
- Clean the condenser with a plastic rigid brush.
- Clean the fan in periodic times.
- Make periodic maintenance of the fire-extinguisher.

F TROUBLESHOOTING

THE APPLIANCE DOESN'T OPERATE	1. Check if the appliance is plugged in. 2. Check the electrical connections and voltage. 3. Check if the fuse is on or off.
--------------------------------------	--

THE APPLIANCE IS NOISY	1. Check the motor. 2. If the connection pipes contact with compressor,remove it.
-------------------------------	--

THE APPLIANCE STOPPED	1. The appliance can stop due to low voltage.In this situation check the voltage. 2. If there is any leakage current at electric connections,the appliance stops.In this situation call the authorized service.
------------------------------	--


INNER TEMPERATURE IS TOO HIGH	1. Clean the condenser. 2. Check the air conditioning. 3. If the hot product is inserted,take it off. 4. If the door is opened,close it.
--------------------------------------	---

- If cooling is not done at suitable quality
- If any function of security doesn't work
 - Do not use the appliance.

***If these problems are still going on,contact with our authorized services.**

REFRIGERATED COUNTERS (FAN COOLING)

G SPARE PART LIST- EXPLODING DRAWINGS

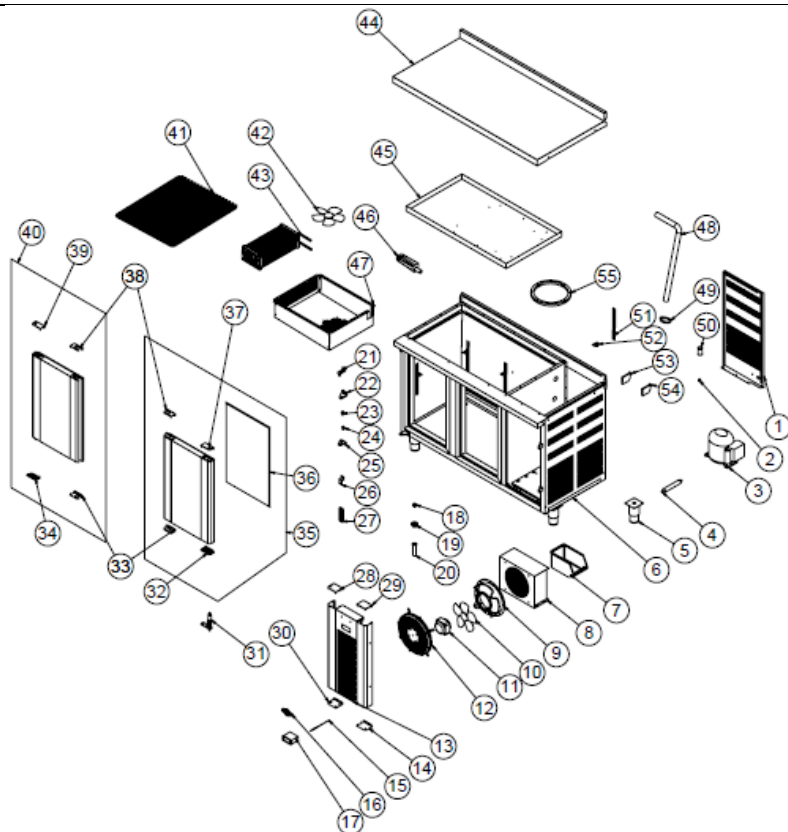

PRODUCT CODE : EMP.125.60.01


NO	PRODUCT NAME	P. CODE
1	ENGINE BACK COVER SHEET	YSC-ERK.1570-PN-0267
2	SIBO	M.SOG-MUH-001
3	COMPRESSOR	M.SOG-KMS-018
4	DRAYER	M.SOG-DRY-004
5	FOOT	ERK.M.AKS-AYK-INX-001
6	CHASSIS	-
7	TOOLS	M.PLS-ERK-038
8	CONDENSER	M.SOG-KDS-041
9	FAN CIRCLE PLASTIC	M.ENJ-ERK-PLS-001
10	WING	M.ELK-HVL-FKN-004
11	FAN MOTOR	M.ELK-MTR-FMT-014

REFRIGERATED COUNTERS (FAN COOLING)

12	FAN CIRCLE WIRE	M.MUH-009
13	ENGINE DOOR SHEET	YSC-ERK.1570-PN-0294
14	BOTTOM LEFT PLASTIC	M.PLS-ERK-032
15	PROP	ERK.M.ELK-EDM-DGT-012
16	METAL LABEL	M.AKS-OZL-MTL-002
17	THERMOSTAT	M.ELK-EDM-DGT-043
18	PLUG	M.ENJ-ERK-PLS-029
19	NUT	M.ENJ-ERK-PLS-024
20	PIPE	M.ENJ-ERK-PLS-002
21	HINGE	M.ENJ-ERK-PLS-010
22	UPPER RIGHT HINGE SHEET	M.AKS-MNT-SC-001
23	PIN	M.AKS-MNT-SC-005
24	BUSH PLASTIC	M.ENJ-ERK-PLS-022
25	BOTTOM LEFT HINGE SHEET	M.AKS-MNT-SC-002
26	HOLDER PLASTIC	M.ENJ-ERK-PLS-009
27	PROP PLASTIC	M.ENJ-ERK-PLS-017
28	TOP PLASTIC LEFT	M.ENJ-ERK-PLS-111
29	TOP LEFT PLASTIC	M.PLS-ERK-031
30	BOTTOM PLASTIC LEFT	M.ENJ-ERK-PLS-112
31	HINGE	M.AKS-MNT-SC-007
32	HINGE BOTTOM PLASTIC RIGHT	M.ENJ-ERK-PLS-107
33	HAND PLASTIC BOTTOM	M.PLS-ERK-030
34	HINGE BOTTOM PLASTIC LEFT	M.ENJ-ERK-PLS-109
35	COVER RIGHT	ARA-ERK.BSS2-0003-ALM-430S
36	GASKET (372 - 590)	M.CNT-ERK-004
37	HINGE TOP PLASTIC RIGHT	M.ENJ-ERK-PLS-108
38	HAND PLASTIC TOP	M.PLS-ERK-029
39	HINGE TOP PLASTIC LEFT	M.ENJ-ERK-PLS-110
40	COVER LEFT	ARA-ERK.BSS2-0001-ALM-430S
41	37*42 WIRE SHELF	M.RAF-ERK-037
42	WING	M.ELK-HVL-FKN-002
43	EVAP	M.SOG-EVP-001
44	TOP TABLE SHEET	YSC-ERK.1570-PN-0269
45	UPPER PAN SHEET	YSC-ERK.1560-PN-0170
46	LEECH	M.ENJ-ERK-PLS-003
47	BENCH HOOD SHEET	YSC-ERK.1570-PN-0283
48	HOSE	HTS-HRT-001
49	HANDCUFF	M.PLS-ERK-003
50	GASKET	M.CNT-ERK-006
51	SHELF STRUT	ERK.M.MUH-002
52	SHELF NAIL	M.RAF-ERK-002
53	TERMINAL	M.ELK-KLM-013
54	TERMINAL	M.ELK-KLM-018
55	SUPPOSITORY	M.CNT-ERK-002

REFRIGERATED COUNTERS (FAN COOLING)

G SPARE PART LIST- EXPLODING DRAWINGS

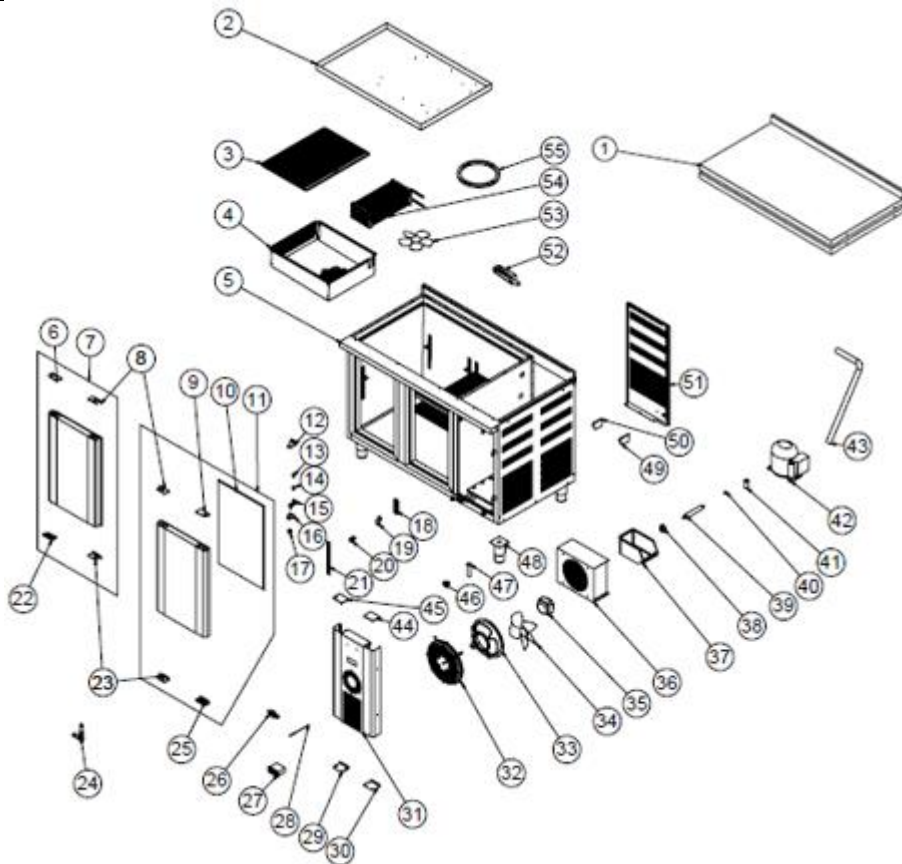

PRODUCT CODE : EMP.125.70.01


NO	PRODUCT NAME	P. CODE
1	TOP TABLE SHEET	YSC-ERK.1570-LZ-0089
2	UPPER PAN SHEET	YSC-ERK.1570-PN-0287
3	37*42 WIRE SHELF	M.RAF-ERK-014
4	BENCH HOOD SHEET	YSC-ERK.1570-PN-0283
5	CHASSIS	-
6	HINGE TOP PLASTIC LEFT	M.ENJ-ERK-PLS-110
7	COVER LEFT	ARA-ERK.BSS2-0001-ALM-430S
8	HAND PLASTIC TOP	M.PLS-ERK-029
9	HINGE TOP PLASTIC RIGHT	M.ENJ-ERK-PLS-108
10	GASKET (372 - 590)	M.CNT-ERK-004

REFRIGERATED COUNTERS (FAN COOLING)

11	COVER RIGHT	ARA-ERK.BSS2-0003-ALM-4305
12	UPPER RIGHT HINGE SHEET	M.AKS-MNT-SC-001
13	PIN	M.AKS-MNT-SC-005
14	BUSH PLASTIC	M.ENJ-ERK-PLS-022
15	HINGE	M.ENJ-ERK-PLS-010
16	BOTTOM LEFT HINGE SHEET	M.AKS-MNT-SC-002
17	PLUG	M.ENJ-ERK-PLS-029
18	PROP PLASTIC	M.ENJ-ERK-PLS-017
19	HOLDER PLASTIC	M.ENJ-ERK-PLS-009
20	SHELF NAIL	M.RAF-ERK-002
21	SHELF STRUT	ERK.M.MUH-002
22	HINGE BOTTOM PLASTIC LEFT	M.ENJ-ERK-PLS-109
23	HAND PLASTIC BOTTOM	M.PLS-ERK-030
24	HINGE	M.AKS-MNT-SC-007
25	HINGE BOTTOM PLASTIC RIGHT	M.ENJ-ERK-PLS-107
26	METAL LABEL	M.AKS-OZL-MTL-002
27	THERMOSTAT	M.ELK-EDM-DGT-043
28	PROP	ERK.M.ELK-EDM-DGT-012
29	BOTTOM PLASTIC LEFT	M.ENJ-ERK-PLS-112
30	BOTTOM LEFT PLASTIC	M.PLS-ERK-032
31	ENGINE DOOR SHEET	YSC-ERK.1570-PN-0294
32	FAN CIRCLE WIRE	M.MUH-009
33	FAN CIRCLE PLASTIC	M.ENJ-ERK-PLS-001
34	WING	M.ELK-HVL-FKN-004
35	FAN MOTOR	M.ELK-MTR-FMT-014
36	CONDENSER	M.SOG-KDS-041
37	TOOLS	M.PLS-ERK-038
38	HANDCUFF	M.PLS-ERK-003
39	DRAYER	M.SOG-DRY-004
40	SIBO	M.SOG-MUH-001
41	GASKET	M.CNT-ERK-006
42	COMPRESSOR	M.SOG-KMS-018
43	HOSE	HTS-HRT-001
44	TOP LEFT PLASTIC	M.PLS-ERK-031
45	TOP PLASTIC LEFT	M.ENJ-ERK-PLS-111
46	NUT	M.ENJ-ERK-PLS-024
47	PIPE	M.ENJ-ERK-PLS-002
48	FOOT	ERK.M.AKS-AYK-INX-001
49	TERMINAL	M.ELK-KLM-013
50	TERMINAL	M.ELK-KLM-018
51	ENGINE BACK COVER SHEET	YSC-ERK.1570-PN-0267
52	LEECH	M.ENJ-ERK-PLS-003
53	WING	M.ELK-HVL-FKN-002
54	EVAP	M.SOG-EVP-001
55	SUPPOSITORY	M.CNT-ERK-002

REFRIGERATED COUNTERS (FAN COOLING)

G SPARE PART LIST- EXPLODING DRAWINGS

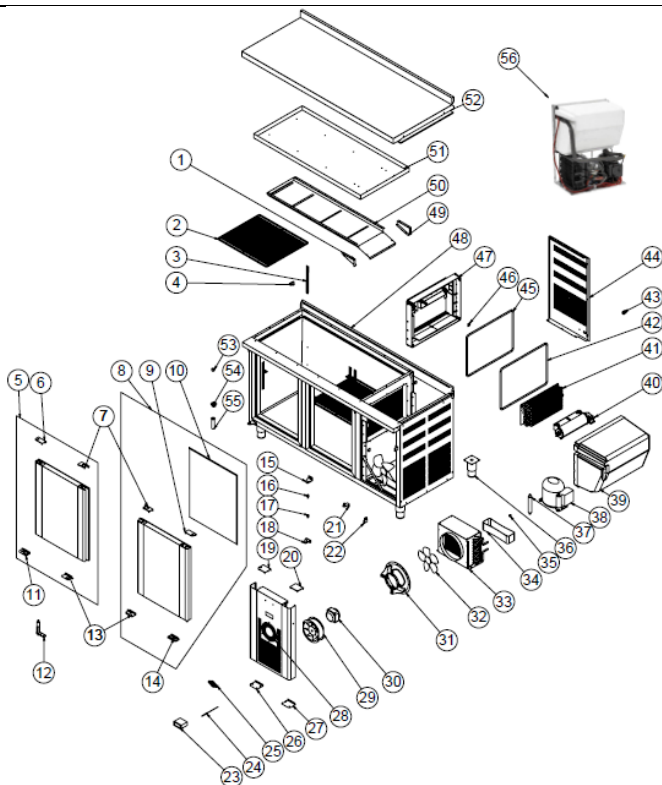


PRODUCT CODE : EMP.150.60.01		
NO	PRODUCT NAME	P. CODE
1	CURTAIN LEFT SIDE SHEET	YSC-ERK.1560-LZ-0065
2	42*49 SHELF	M.RAF-ERK-001
3	SHELF STRUT	ERK.M.MUH-002
4	SHELF NAIL	M.RAF-ERK-002
5	COVER LEFT	ARA-ERK.1560-AKB TEZGAH KAPAK-
6	HINGE TOP PLASTIC LEFT	M.ENJ-ERK-PLS-110
7	HAND PLASTIC TOP	M.PLS-ERK-029
8	COVER RIGHT	ARA-ERK.1560-TEZGAH KAPAK-SAG-
9	HINGE TOP PLASTIC RIGHT	M.ENJ-ERK-PLS-108
10	GASKET (590 - 472)	M.CNT-ERK-001
11	HINGE BOTTOM PLASTIC LEFT	M.ENJ-ERK-PLS-109
12	HINGE	M.AKS-MNT-SC-007

REFRIGERATED COUNTERS (FAN COOLING)

13	HAND PLASTIC BOTTOM	M.PLS-ERK-030
14	HINGE BOTTOM PLASTIC RIGHT	M.ENJ-ERK-PLS-107
15	UPPER RIGHT HINGE SHEET	M.AKS-MNT-SC-001
16	PIN	M.AKS-MNT-SC-005
17	BUSH PLASTIC	M.ENJ-ERK-PLS-022
18	BOTTOM LEFT HINGE SHEET	M.AKS-MNT-SC-002
19	TOP PLASTIC LEFT	M.ENJ-ERK-PLS-111
20	TOP LEFT PLASTIC	M.PLS-ERK-031
21	HINGE	M.ENJ-ERK-PLS-010
22	HOLDER PLASTIC	M.ENJ-ERK-PLS-009
23	THERMOSTAT	M.ELK-EDM-DGT-043
24	PROP	ERK.M.ELK-EDM-DGT-012
25	METAL LABEL	M.AKS-OZL-MTL-002
26	BOTTOM PLASTIC LEFT	M.ENJ-ERK-PLS-112
27	BOTTOM LEFT PLASTIC	M.PLS-ERK-032
28	ENGINE DOOR SHEET	YSC-ERK.1560-PN-0128
29	FAN	ERK.M.ELK-HVL-KFN-001
30	FAN MOTOR	M.ELK-MTR-FMT-014
31	FAN CIRCLE PLASTIC	M.ENJ-ERK-PLS-001
32	WING	M.ELK-HVL-FKN-004
33	CONDENSER NEGATIVE	M.SOG-KDS-027
34	TOOLS	M.PLS-ERK-038
35	SIBO	M.SOG-MUH-001
36	FOOT	ERK.M.AKS-AYK-INX-001
37	DRAYER	M.SOG-DRY-004
38	COMPRESSOR	M.SOG-KMS-018
39	INSULATION FOAM	YIZ-ERK.1560-MH-0001
40	FAN	ERK.M.ELK-HVL-KFN-003
41	EVAP SMALL POSITIVE (+)	M.SOG-EVP-033
42	OUTER GASKET	M.CNT-ERK-069
43	CABLE GLAND	ERK.M.ELK-RKR-PLS-003
44	ENGINE BACK COVER SHEET	YSC-ERK.1560-PN-0122
45	INTERNAL GASKET	M.CNT-ERK-070
46	CORNER PLASTIC	M.PLS-ERK-027
47	MONOBLOCK PLASTIC	M.PLS-ERK-026
48	CHASSIS	-
49	CURTAIN RIGHT SIDE SHEET	YSC-ERK.1560-LZ-0064
50	CURTAIN SHEET	YSC-ERK.1560-LZ-0063
51	UPPER PAN SHEET	YSC-ERK.1560-PN-0177
52	TOP TABLE	YSC-ERK.1560-LZ-0030
53	PLUG	M.ENJ-ERK-PLS-029
54	NUT	M.ENJ-ERK-PLS-024
55	PIPE	M.ENJ-ERK-PLS-002
56	COOLING GROUP	ARA-ERK.1560-0001-AKB

REFRIGERATED COUNTERS (FAN COOLING)

G SPARE PART LIST- EXPLODING DRAWINGS

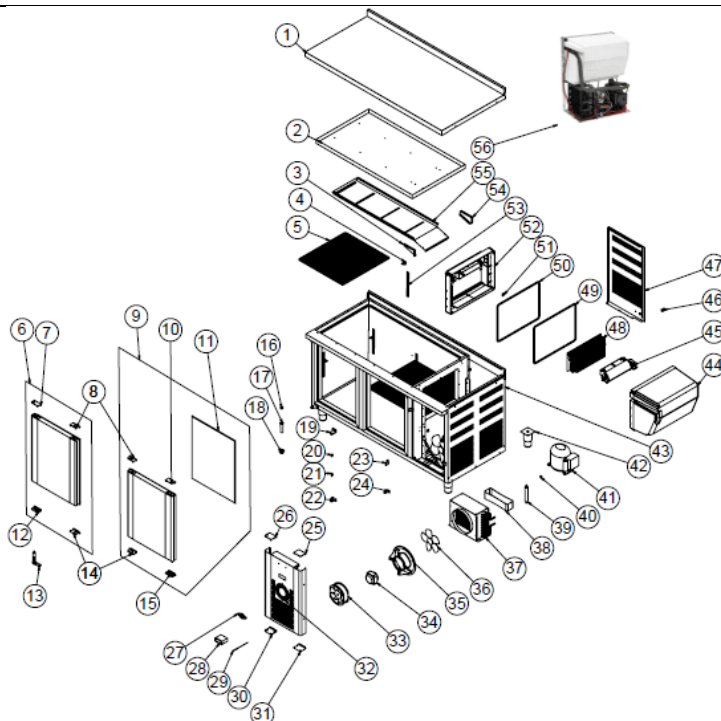


PRODUCT CODE : EMP.150.70.01		
NO	PRODUCT NAME	P. CODE
1	TOP TABLE SHEET	YSC-ERK.1570-LZ-0040
2	UPPER PAN SHEET	YSC-ERK.1570-PN-0291
3	CURTAIN LEFT SIDE SHEET	YSC-ERK.1560-LZ-0065
4	SHELF NAIL	M.RAF-ERK-002
5	49*52 SHELF	M.RAF-ERK-003
6	COVER LEFT	ARA-ERK.1560-AKB TEZGAH
7	HINGE TOP PLASTIC LEFT	M.ENJ-ERK-PLS-110
8	HAND PLASTIC TOP	M.PLS-ERK-029
9	COVER RIGHT	ARA-ERK.1560-TEZGAH KAPAK-
10	HINGE TOP PLASTIC RIGHT	M.ENJ-ERK-PLS-108
11	GASKET (590 - 472)	M.CNT-ERK-001
12	HINGE BOTTOM PLASTIC LEFT	M.ENJ-ERK-PLS-109
13	HINGE	M.AKS-MNT-SC-007
14	HAND PLASTIC BOTTOM	M.PLS-ERK-030

REFRIGERATED COUNTERS (FAN COOLING)

15	HINGE BOTTOM PLASTIC RIGHT	M.ENJ-ERK-PLS-107
16	PLUG	M.ENJ-ERK-PLS-029
17	PIPE	M.ENJ-ERK-PLS-002
18	NUT	M.ENJ-ERK-PLS-024
19	UPPER RIGHT HINGE SHEET	M.AKS-MNT-SC-001
20	BUSH PLASTIC	M.ENJ-ERK-PLS-022
21	PIN	M.AKS-MNT-SC-005
22	BOTTOM LEFT HINGE SHEET	M.AKS-MNT-SC-002
23	HOLDER PLASTIC	M.ENJ-ERK-PLS-009
24	HINGE	M.ENJ-ERK-PLS-010
25	TOP LEFT PLASTIC	M.PLS-ERK-031
26	TOP PLASTIC LEFT	M.ENJ-ERK-PLS-111
27	METAL LABEL	M.AKS-OZL-MTL-002
28	THERMOSTAT	M.ELK-EDM-DGT-043
29	PROP	ERK.M.ELK-EDM-DGT-012
30	BOTTOM PLASTIC LEFT	M.ENJ-ERK-PLS-112
31	BOTTOM LEFT PLASTIC	M.PLS-ERK-032
32	ENGINE DOOR SHEET	YSC-ERK.1560-PN-0128
33	FAN	ERK.M.ELK-HVL-KFN-001
34	FAN MOTOR	M.ELK-MTR-FMT-014
35	FAN CIRCLE PLASTIC	M.ENJ-ERK-PLS-001
36	WING	M.ELK-HVL-KFN-004
37	CONDENSER NEGATIVE	M.SOG-KDS-027
38	TOOLS	M.PLS-ERK-038
39	DRAYER	M.SOG-DRY-004
40	SIBO	M.SOG-MUH-001
41	COMPRESSOR	M.SOG-KMS-018
42	FOOT	ERK.M.AKS-AYK-INX-001
43	CHASSIS	-
44	INSULATION FOAM	YIZ-ERK.1560-MH-0001
45	FAN	ERK.M.ELK-HVL-KFN-003
46	CABLE GLAND	ERK.M.ELK-RKR-PLS-003
47	ENGINE BACK COVER SHEET	YSC-ERK.1560-PN-0122
48	EVAP SMALL POSITIVE (+)	M.SOG-EVP-033
49	OUTER GASKET	M.CNT-ERK-069
50	INTERNAL GASKET	M.CNT-ERK-070
51	CORNER PLASTIC	M.PLS-ERK-027
52	MONOBLOCK PLASTIC	M.PLS-ERK-026
53	SHELF STRUT	ERK.M.MUH-002
54	CURTAIN RIGHT SIDE SHEET	YSC-ERK.1560-LZ-0064
55	CURTAIN SHEET	YSC-ERK.1560-LZ-0063
56	COOLING GROUP	ARA-ERK.1560-0001-AKB

REFRIGERATED COUNTERS (FAN COOLING)

G SPARE PART LIST- EXPLODING DRAWINGS

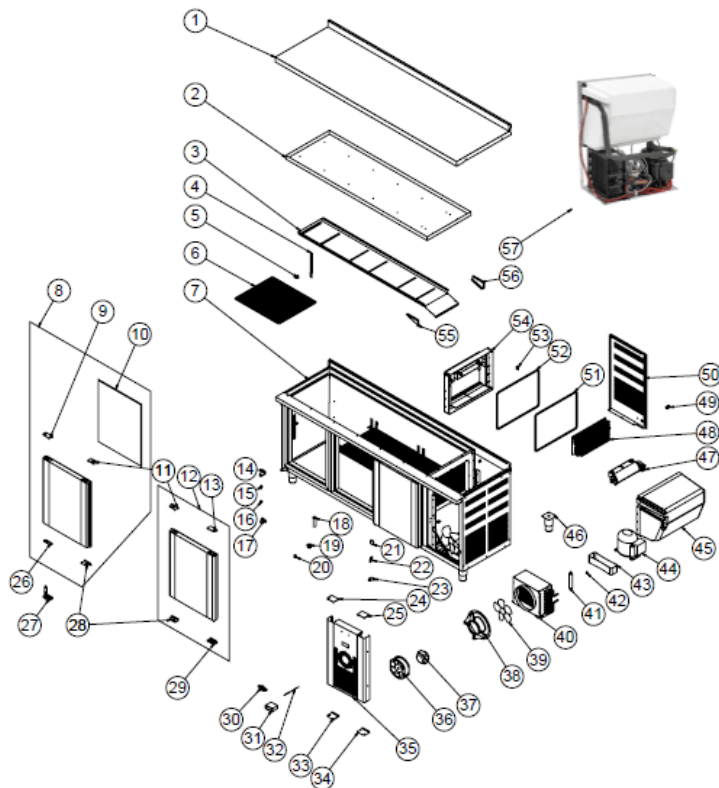

PRODUCT CODE : EMP.200.60.01


NO	PRODUCT NAME	P. CODE
1	TOP TABLE	YSC-ERK.2060-LZ-0007
2	UPPER PAN SHEET	YSC-ERK.2060-PN-0093
3	CURTAIN SHEET	YSC-ERK.2060-LZ-0019
4	SHELF STRUT	ERK.M.MUH-002
5	SHELF NAIL	M.RAF-ERK-002
6	42*49 SHELF	M.RAF-ERK-001
7	CHASSIS	-
8	COVER LEFT	ARA-ERK.1560-AKB TEZGAH
9	HINGE TOP PLASTIC LEFT	M.ENJ-ERK-PLS-110
10	GASKET (590 - 472)	M.CNT-ERK-001
11	HAND PLASTIC TOP	M.PLS-ERK-029
12	COVER RIGHT	ARA-ERK.1560-TEZGAH KAPAK-

REFRIGERATED COUNTERS (FAN COOLING)

13	HINGE TOP PLASTIC RIGHT	M.ENJ-ERK-PLS-108
14	UPPER RIGHT HINGE SHEET	M.AKS-MNT-SC-001
15	PIN	M.AKS-MNT-SC-005
16	BUSH PLASTIC	M.ENJ-ERK-PLS-022
17	BOTTOM LEFT HINGE SHEET	M.AKS-MNT-SC-002
18	PIPE	M.ENJ-ERK-PLS-002
19	NUT	M.ENJ-ERK-PLS-024
20	PLUG	M.ENJ-ERK-PLS-029
21	HOUSING PLASTIC	M.PLS-ERK-002
22	HOLDER PLASTIC	M.ENJ-ERK-PLS-009
23	HINGE	M.ENJ-ERK-PLS-010
24	TOP PLASTIC LEFT	M.ENJ-ERK-PLS-111
25	TOP LEFT PLASTIC	M.PLS-ERK-031
26	HINGE BOTTOM PLASTIC LEFT	M.ENJ-ERK-PLS-109
27	HINGE	M.AKS-MNT-SC-007
28	HAND PLASTIC BOTTOM	M.PLS-ERK-030
29	HINGE BOTTOM PLASTIC RIGHT	M.ENJ-ERK-PLS-107
30	METAL LABEL	M.AKS-OZL-MTL-002
31	THERMOSTAT	M.ELK-EDM-DGT-043
32	PROP	ERK.M.ELK-EDM-DGT-012
33	BOTTOM PLASTIC LEFT	M.ENJ-ERK-PLS-112
34	BOTTOM LEFT PLASTIC	M.PLS-ERK-032
35	ENGINE DOOR SHEET	YSC-ERK.1560-PN-0128
36	FAN	ERK.M.ELK-HVL-KFN-001
37	FAN MOTOR	M.ELK-MTR-FMT-014
38	FAN CIRCLE PLASTIC	M.ENJ-ERK-PLS-001
39	WING	M.ELK-HVL-FKN-004
40	CONDENSER NEGATIVE	M.SOG-KDS-027
41	DRAYER	M.SOG-DRY-004
42	SIBO	M.SOG-MUH-001
43	TOOLS	M.PLS-ERK-038
44	COMPRESSOR	M.SOG-KMS-018
45	INSULATION FOAM	YIZ-ERK.1560-MH-0001
46	FOOT	ERK.M.AKS-AYK-INX-001
47	FAN	ERK.M.ELK-HVL-KFN-003
48	EVAP SMALL POSITIVE (+)	M.SOG-EVP-033
49	CABLE GLAND	ERK.M.ELK-RKR-PLS-003
50	ENGINE BACK COVER SHEET	YSC-ERK.1560-PN-0122
51	OUTER GASKET	M.CNT-ERK-069
52	INTERNAL GASKET	M.CNT-ERK-070
53	CORNER PLASTIC	M.PLS-ERK-027
54	MONOBLOCK PLASTIC	M.PLS-ERK-026
55	CURTAIN LEFT SIDE SHEET	YSC-ERK.1560-LZ-0065
56	CURTAIN RIGHT SIDE SHEET	YSC-ERK.1560-LZ-0064
57	COOLING GROUP	ARA-ERK.2060-0001-AKB

REFRIGERATED COUNTERS (FAN COOLING)

G SPARE PART LIST- EXPLODING DRAWINGS

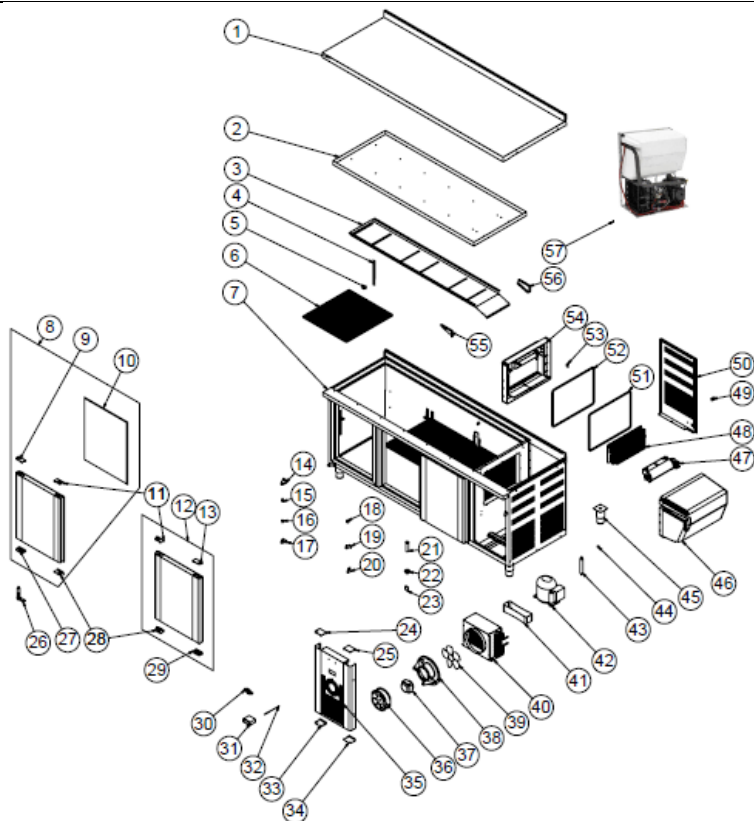

PRODUCT CODE : EMP.200.70.01


NO	PRODUCT NAME	P. CODE
1	TOP TABLE SHEET	YSC-ERK.2070-LZ-0026
2	UPPER PAN SHEET	YSC-ERK.2070-PN-0129
3	CURTAIN SHEET	YSC-ERK.2060-LZ-0019
4	SHELF STRUT	ERK.M.MUH-002
5	SHELF NAIL	M.RAF-ERK-002
6	49*52 SHELF	M.RAF-ERK-003
7	CHASSIS	-
8	COVER LEFT	ARA-ERK.1560-AKB TEZGAH KAPAK-
9	HINGE TOP PLASTIC LEFT	M.ENJ-ERK-PLS-110
10	GASKET (590 - 472)	M.CNT-ERK-001
11	HAND PLASTIC TOP	M.PLS-ERK-029

REFRIGERATED COUNTERS (FAN COOLING)

12	COVER RIGHT	ARA-ERK.1560-TEZGAH KAPAK-SAG-
13	HINGE TOP PLASTIC RIGHT	M.ENJ-ERK-PLS-108
14	UPPER RIGHT HINGE SHEET	M.AKS-MNT-SC-001
15	PIN	M.AKS-MNT-SC-005
16	BUSH PLASTIC	M.ENJ-ERK-PLS-022
17	BOTTOM LEFT HINGE SHEET	M.AKS-MNT-SC-002
18	PLUG	M.ENJ-ERK-PLS-029
19	HINGE	M.ENJ-ERK-PLS-010
20	HOLDER PLASTIC	M.ENJ-ERK-PLS-009
21	PIPE	M.ENJ-ERK-PLS-002
22	NUT	M.ENJ-ERK-PLS-024
23	HOUSING PLASTIC	M.PLS-ERK-002
24	TOP PLASTIC LEFT	M.ENJ-ERK-PLS-111
25	TOP LEFT PLASTIC	M.PLS-ERK-031
26	HINGE	M.AKS-MNT-SC-007
27	HINGE BOTTOM PLASTIC LEFT	M.ENJ-ERK-PLS-109
28	HAND PLASTIC BOTTOM	M.PLS-ERK-030
29	HINGE BOTTOM PLASTIC RIGHT	M.ENJ-ERK-PLS-107
30	METAL LABEL	M.AKS-OZL-MTL-002
31	THERMOSTAT	M.ELK-EDM-DGT-043
32	PROP	ERK.M.ELK-EDM-DGT-012
33	BOTTOM PLASTIC LEFT	M.ENJ-ERK-PLS-112
34	BOTTOM LEFT PLASTIC	M.PLS-ERK-032
35	ENGINE DOOR SHEET	YSC-ERK.1560-PN-0128
36	FAN	ERK.M.ELK-HVL-KFN-001
37	FAN MOTOR	M.ELK-MTR-FMT-014
38	FAN CIRCLE PLASTIC	M.ENJ-ERK-PLS-001
39	WING	M.ELK-HVL-FKN-004
40	CONDENSER NEGATIVE	M.SOG-KDS-027
41	TOOLS	M.PLS-ERK-038
42	COMPRESSOR	M.SOG-KMS-018
43	DRAYER	M.SOG-DRY-004
44	SIBO	M.SOG-MUH-001
45	FOOT	ERK.M.AKS-AYK-INX-001
46	INSULATION FOAM	YIZ-ERK.1560-MH-0001
47	FAN	ERK.M.ELK-HVL-KFN-003
48	EVAP SMALL POSITIVE (+)	M.SOG-EVP-033
49	CABLE GLAND	ERK.M.ELK-RKR-PLS-003
50	ENGINE BACK COVER SHEET	YSC-ERK.1560-PN-0122
51	OUTER GASKET	M.CNT-ERK-069
52	INTERNAL GASKET	M.CNT-ERK-070
53	CORNER PLASTIC	M.PLS-ERK-027
54	MONOBLOCK PLASTIC	M.PLS-ERK-026
55	CURTAIN LEFT SIDE SHEET	YSC-ERK.1560-LZ-0065
56	CURTAIN RIGHT SIDE SHEET	YSC-ERK.1560-LZ-0064
57	COOLING GROUP	ARA-ERK.2060-0001-AKB

REFRIGERATED COUNTERS (FAN COOLING)

G SPARE PART LIST- EXPLODING DRAWINGS

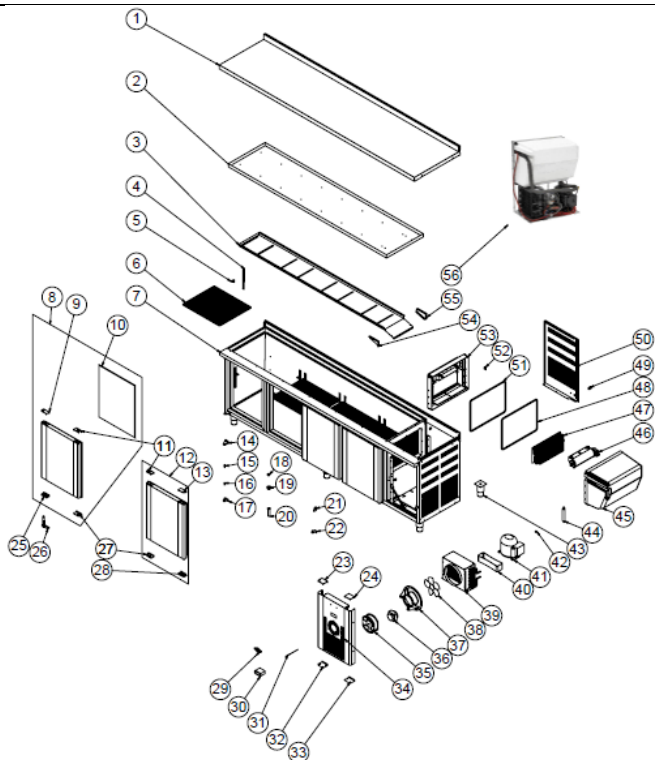


PRODUCT CODE : EMP.255.60.01		
NO	PRODUCT NAME	P. CODE
1	TOP TABLE	YSC-ERK.2560-LZ-0017
2	UPPER PAN SHEET	YSC-ERK.2560-PN-0087
3	CURTAIN SHEET	YSC-ERK.2560-LZ-0028
4	SHELF STRUT	ERK.M.MUH-002
5	SHELF NAIL	M.RAF-ERK-002
6	42*49 SHELF	M.RAF-ERK-001
7	CHASSIS	-
8	COVER LEFT	ARA-ERK.1560-AKB TEZGAH KAPAK-
9	HINGE TOP PLASTIC LEFT	M.ENJ-ERK-PLS-110
10	GASKET (590 - 472)	M.CNT-ERK-001
11	HAND PLASTIC TOP	M.PLS-ERK-029
12	COVER RIGHT	ARA-ERK.1560-TEZGAH KAPAK-SAG-
13	HINGE TOP PLASTIC RIGHT	M.ENJ-ERK-PLS-108

REFRIGERATED COUNTERS (FAN COOLING)

14	UPPER RIGHT HINGE SHEET	M.AKS-MNT-SC-001
15	PIN	M.AKS-MNT-SC-005
16	BUSH PLASTIC	M.ENJ-ERK-PLS-022
17	BOTTOM LEFT HINGE SHEET	M.AKS-MNT-SC-002
18	PLUG	M.ENJ-ERK-PLS-029
19	NUT	M.ENJ-ERK-PLS-024
20	PIPE	M.ENJ-ERK-PLS-002
21	HOLDER PLASTIC	M.ENJ-ERK-PLS-009
22	HINGE	M.ENJ-ERK-PLS-010
23	TOP PLASTIC LEFT	M.ENJ-ERK-PLS-111
24	TOP LEFT PLASTIC	M.PLS-ERK-031
25	HINGE BOTTOM PLASTIC LEFT	M.ENJ-ERK-PLS-109
26	HINGE	M.AKS-MNT-SC-007
27	HAND PLASTIC BOTTOM	M.PLS-ERK-030
28	HINGE BOTTOM PLASTIC RIGHT	M.ENJ-ERK-PLS-107
29	METAL LABEL	M.AKS-OZL-MTL-002
30	THERMOSTAT	M.ELK-EDM-DGT-043
31	PROP	ERK.M.ELK-EDM-DGT-012
32	BOTTOM PLASTIC LEFT	M.ENJ-ERK-PLS-112
33	BOTTOM LEFT PLASTIC	M.PLS-ERK-032
34	ENGINE DOOR SHEET	YSC-ERK.2560-PN-0066
35	FAN	ERK.M.ELK-HVL-KFN-001
36	FAN MOTOR	ERK.M.ELK-MTR-FMT-002
37	FAN CIRCLE PLASTIC	M.ENJ-ERK-PLS-001
38	WING	M.ELK-HVL-FKN-004
39	CONDENSER NEGATIVE	M.SOG-KDS-027
40	TOOLS	M.PLS-ERK-038
41	COMPRESSOR	M.SOG-KMS-022
42	SIBO	M.SOG-MUH-001
43	FOOT	ERK.M.AKS-AYK-INX-001
44	DRAYER	M.SOG-DRY-004
45	INSULATION FOAM	YIZ-ERK.1560-MH-0001
46	FAN	ERK.M.ELK-HVL-KFN-003
47	EVAP BIG POSITIVE (+)	M.SOG-EVP-044
48	OUTER GASKET	M.CNT-ERK-069
49	CABLE GLAND	ERK.M.ELK-RKR-PLS-003
50	ENGINE BACK COVER SHEET	YSC-ERK.2560-PN-0068
51	INTERNAL GASKET	M.CNT-ERK-070
52	CORNER PLASTIC	M.PLS-ERK-027
53	MONOBLOCK PLASTIC	M.PLS-ERK-026
54	CURTAIN LEFT SIDE SHEET	YSC-ERK.1560-LZ-0065
55	CURTAIN RIGHT SIDE SHEET	YSC-ERK.1560-LZ-0064
56	COOLING GROUP	ARA-ERK.2560-0001-AKB

REFRIGERATED COUNTERS (FAN COOLING)

G SPARE PART LIST- EXPLODING DRAWINGS

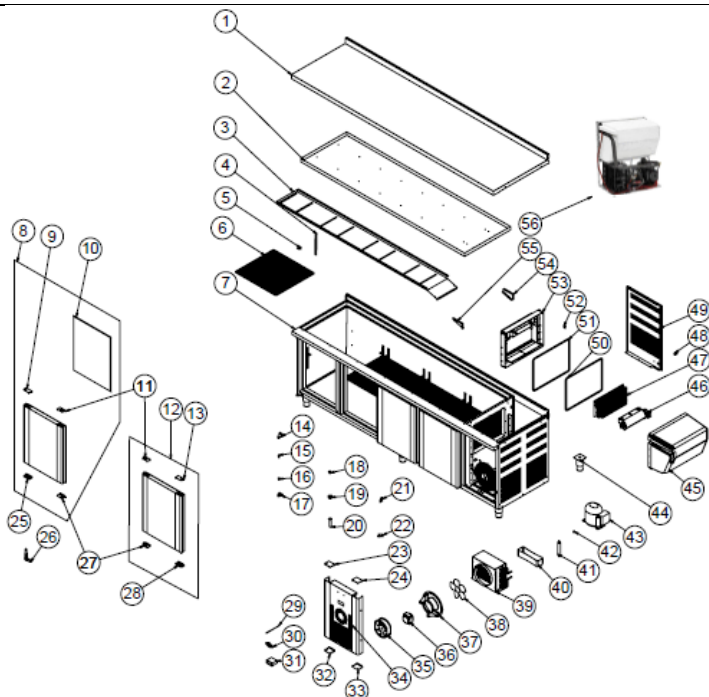


PRODUCT CODE : EMP.255.70.01		
NO	PRODUCT NAME	P. CODE
1	TOP TABLE SHEET	YSC-ERK.2570-LZ-0007
2	UPPER PAN SHEET	YSC-ERK.2570-PN-0042
3	CURTAIN SHEET	YSC-ERK.2560-LZ-0028
4	SHELF STRUT	ERK.M.MUH-002
5	SHELF NAIL	M.RAF-ERK-002
6	49*52 SHELF	M.RAF-ERK-003
7	CHASSIS	-
8	COVER LEFT	ARA-ERK.1560-AKB TEZGAH KAPAK-
9	HINGE TOP PLASTIC LEFT	M.ENJ-ERK-PLS-110
10	GASKET (590 - 472)	M.CNT-ERK-001
11	HAND PLASTIC TOP	M.PLS-ERK-029
12	COVER RIGHT	ARA-ERK.1560-TEZGAH KAPAK-SAG-
13	HINGE TOP PLASTIC RIGHT	M.ENJ-ERK-PLS-108
14	UPPER RIGHT HINGE SHEET	M.AKS-MNT-SC-001

REFRIGERATED COUNTERS (FAN COOLING)

15	PIN	M.AKS-MNT-SC-005
16	BUSH PLASTIC	M.ENJ-ERK-PLS-022
17	BOTTOM LEFT HINGE SHEET	M.AKS-MNT-SC-002
18	PLUG	M.ENJ-ERK-PLS-029
19	NUT	M.ENJ-ERK-PLS-024
20	PIPE	M.ENJ-ERK-PLS-002
21	HOLDER PLASTIC	M.ENJ-ERK-PLS-009
22	HINGE	M.ENJ-ERK-PLS-010
23	TOP PLASTIC LEFT	M.ENJ-ERK-PLS-111
24	TOP LEFT PLASTIC	M.PLS-ERK-031
25	HINGE BOTTOM PLASTIC LEFT	M.ENJ-ERK-PLS-109
26	HINGE	M.AKS-MNT-SC-007
27	HAND PLASTIC BOTTOM	M.PLS-ERK-030
28	HINGE BOTTOM PLASTIC RIGHT	M.ENJ-ERK-PLS-107
29	PROP	ERK.M.ELK-EDM-DGT-012
30	METAL LABEL	M.AKS-OZL-MTL-002
31	THERMOSTAT	M.ELK-EDM-DGT-043
32	BOTTOM PLASTIC LEFT	M.ENJ-ERK-PLS-112
33	BOTTOM LEFT PLASTIC	M.PLS-ERK-032
34	ENGINE DOOR SHEET	YSC-ERK.2560-PN-0066
35	FAN	ERK.M.ELK-HVL-KFN-001
36	FAN MOTOR	ERK.M.ELK-MTR-FMT-002
37	FAN CIRCLE PLASTIC	M.ENJ-ERK-PLS-001
38	WING	M.ELK-HVL-FKN-004
39	CONDENSER NEGATIVE	M.SOG-KDS-027
40	TOOLS	M.PLS-ERK-038
41	DRAWER	M.SOG-DRY-004
42	SIBO	M.SOG-MUH-001
43	COMPRESSOR	M.SOG-KMS-022
44	FOOT	ERK.M.AKS-AYK-INX-001
45	INSULATION FOAM	YIZ-ERK.1560-MH-0001
46	FAN	ERK.M.ELK-HVL-KFN-003
47	EVAP BIG POSITIVE (+)	M.SOG-EVP-044
48	CABLE GLAND	ERK.M.ELK-RKR-PLS-003
49	ENGINE BACK COVER SHEET	YSC-ERK.2560-PN-0068
50	OUTER GASKET	M.CNT-ERK-069
51	INTERNAL GASKET	M.CNT-ERK-070
52	CORNER PLASTIC	M.PLS-ERK-027
53	MONOBLOCK PLASTIC	M.PLS-ERK-026
54	CURTAIN RIGHT SIDE SHEET	YSC-ERK.1560-LZ-0064
55	CURTAIN LEFT SIDE SHEET	YSC-ERK.1560-LZ-0065
56	COOLING GROUP	ARA-ERK.2560-0001-AKB

REFRIGERATED COUNTERS (FAN COOLING)

H ELECTRIC CIRCUIT SCHEMA

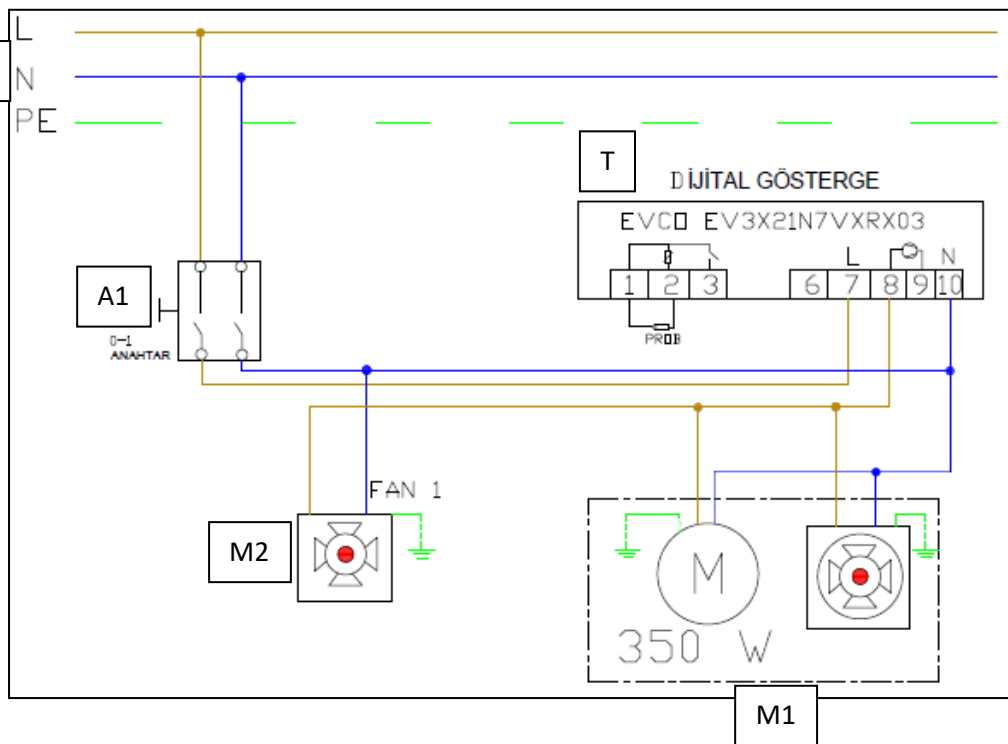

EMP.150.70.01 – EMP.255.70.01

I	A1	T	M1	M2
Terminal	Large lighted 0-1 switch	Digital Indicator	Compressor and condenser fan	Refrigerator inner cooling fan